C199

12B637

A254
5R55E Transmis-
sion

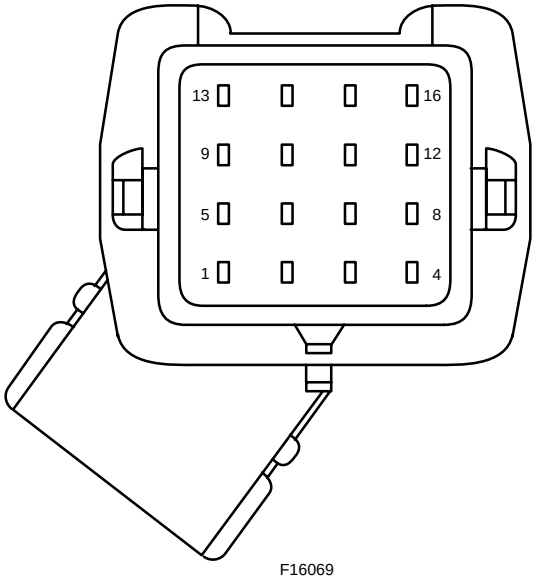

F16069

Pin	Circuit	Circuit function
1	34 (LB/OG)	Voltage supplied in Start and Run (overload protected)
2	970 (DG/WH)	Turbine Shaft Speed (TSS) sensor
3	359 (GY/RD)	signal, return
4	923 (OG/BK)	Transmission Fluid Temperature (TFT) sensor, input
5	480 (VT/YE)	Torque Converter Clutch (TCC) solenoid
6	–	not used
7	971 (PK/BK)	Shift solenoid C
8	359 (GY/RD)	signal, return
9	924 (BN/OG)	Shift solenoid D
10	34 (LB/OG)	Voltage supplied in Start and Run (overload protected)
11	34 (LB/OG)	Voltage supplied in Start and Run (overload protected)
12	925 (WH/YE)	Electronic Pressure Control (EPC) solenoid
13	–	not used
14	315 (VT/OG)	Shift solenoid B
15	–	not used
16	237 (OG/YE)	Shift solenoid A

C202a (GY)

14A320

N442
Multifunction switch

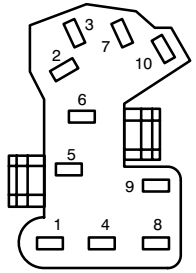

F10030

Pin	Circuit	Circuit function
1	44 (LB)	Turn signal flasher, to turn signal switch
2	378 (BN/YE)	Trailer tow connector (15A416), output
	5 (OG/LB)	Turn lamps, feed, right rear
3	–	not used
4	385 (WH/RD)	Voltage supplied at all times (overload protected)
5	2 (WH/LB)	Turn lamps, feed, right front
6	–	not used
7	–	not used
8	3 (LG/WH)	Turn lamps, feed, left front
9	511 (LG)	Brake pedal position switch (13480), to stoplamps
10	374 (DB/WH)	Trailer tow connector (15A416), output
	9 (LG/OG)	Turn lamps, feed, left rear