C218a

14401

A216
Steering wheel assembly



F10067

Pin	Circuit	Circuit Function
1	8-MD26 (WH/BK)	Auxiliary audio controls, steering wheel
2	–	not used
3	9-AL17 (BN/WH)	Sensor signal return (reference/ground)
4	7-AL17 (YE/VT)	Voltage D.C. supplied at all times (sensor)
5	8-AL17 (WH/VT)	Sensor signal
6	8-AL16 (WH/BK)	Sensor signal
7	7-PG24 (YE/BU)	Voltage D.C. supplied at all times (sensor)
8	31S-PG24 (BK/OG)	Ground
9	10-GJ9 (GY/OG)	Signal 2 (Y–direction, reverse, downward)
10	64-LK18 (BU/RD)	Variable D.C. voltage (not overload protected)

C218b

14401

A216
Steering wheel assembly

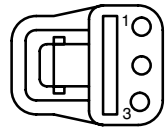

F03035

Pin	Circuit	Circuit Function
1	31S-JA8 (BK/OG)	Voltage supplied at all times (not overload protected), Switched
2	–	not used
3	30S-JA8 (RD/OG)	Ground, Switched

C218c

14401

A216
Steering wheel assembly

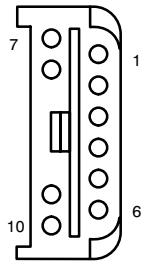

F10067

Pin	Circuit	Circuit Function
1	9-LG43 (BN/WH)	Sensor signal return (reference/ground)
2	8–LE14 (WH/BU)	Sensor signal
3	8-LG43 (WH/VT)	Sensor signal
4	7-KA19 (YE/BK)	Voltage D.C. supplied at all times (sensor)
5	10-KA19 (GY/BK)	Signal 2 (Y–direction, reverse, downward)
6	8-KA19 (WH/BK)	Sensor signal
7	9-AL10 (BN)	Sensor signal return (reference/ground)
8	8-AL10 (WH)	Sensor signal
9	–	not used
10	–	not used