## C396 (BK)

**14A005**

Speaker, right rear (18808)




F02048

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 803 (BN/PK) | Speaker, right rear (18808) – |
| 2 | 802 (OG/RD) | Speaker, right rear (18808) + |

## C402a (BK)

**18C619**
**14A005**

Rear window defrost grid (18C618)

F01029

* Convertible

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | *687 (BK) | Rear window defrost relay, switched power |
| | 186 (BN/LB) | Rear window defrost relay, switched power |

## C402b (BK)

**18C620**

Rear window defrost grid (18C618)

F01029

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |

## C405 (BN)

**19B516**

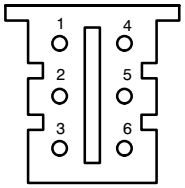


F063535

(1) 705 (LG/OG)
(2) 1205 (BK)
(3) 569 (DG)

**14A005**

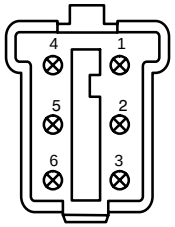


F06353

(4) 84 (VT/YE)
(5) 14 (BN)
(6) 486 (BN/WH)

## C406 (BK)

**13410**




F04421

**14A005**

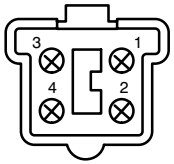


F04423

(1) 9 (LG/OG)
(2) 14 (BN)
(3) 140 (BK/PK)
(4) 1205 (BK)

## C408 (BK)

**13407**




F04421

**14A005**

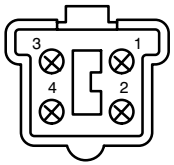


F04423

(1) 5 (OG/LB)
(2) 14 (BN)
(3) 140 (BK/PK)
(4) 1205 (BK)