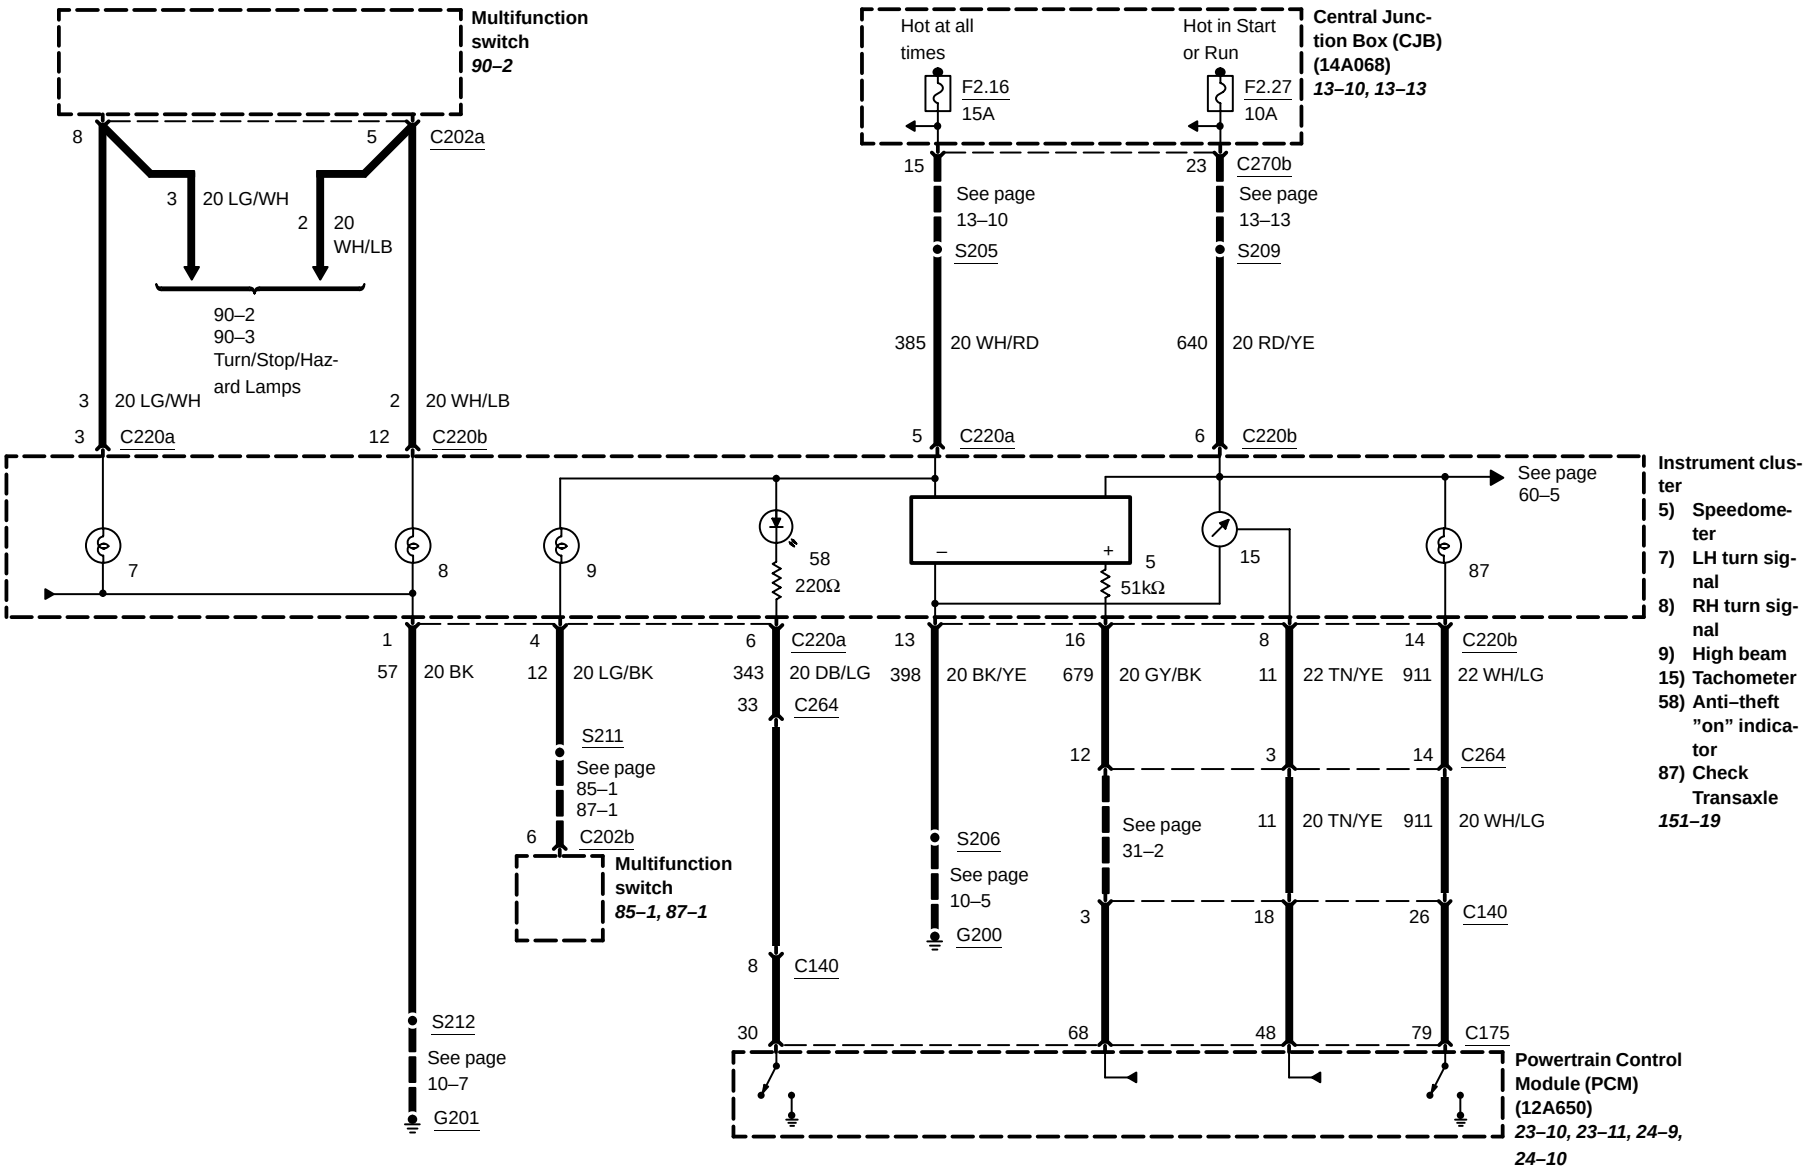
Multifunction switch
90–2
8
5
C202a
3
20 LG/WH
2
20 WH/LB
90–2
90–3
Turn/Stop/Hazard Lamps
3
20 LG/WH
2
20 WH/LB
3
C220a
12
C220b
Hot at all times
Hot in Start or Run
F2.16
15A
F2.27
10A
Central Junction Box (CJB)
(14A068)
13–10, 13–13
15
23
C270b
See page 13–10
See page 13–13
S205
S209
385
20 WH/RD
640
20 RD/YE
5
C220a
6
C220b
See page 60–5
Instrument cluster
5) Speedometer
7) LH turn signal
8) RH turn signal
9) High beam
15) Tachometer
58) Anti–theft "on" indicator
87) Check Transaxle
151–19
7
8
9
58
220Ω
5
51kΩ
15
87
1
57
20 BK
4
12
20 LG/BK
6
343
20 DB/LG
C220a
33
C264
13
398
20 BK/YE
16
679
20 GY/BK
8
11
22 TN/YE
14
911
22 WH/LG
C220b
S211
See page 85–1
87–1
6
C202b
Multifunction switch
85–1, 87–1
12
3
14
C264
See page 31–2
11
20 TN/YE
911
20 WH/LG
S206
See page 10–5
G200
3
18
26
C140
8
C140
30
68
48
79
C175
S212
See page 10–7
G201
Powertrain Control Module (PCM)
(12A650)
23–10, 23–11, 24–9, 24–10