C522

14A005

M259
Exterior rear view mirror, left



F03079

Pin	Circuit	Circuit Function
1	32-AD10 (WH/BK)	Switched between: Battery voltage, Ground or Open
2	34-AD31 (BU/WH)	Switched between: Battery voltage, Ground or Open
3	32-AD32 (WH/RD)	Switched between: Battery voltage, Ground or Open

C523

14A005

Y28
Speaker, left front (18808)

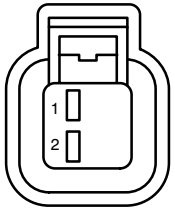

F02069

Pin	Circuit	Circuit Function
1	8-MD10 (WH/BK)	Speaker, left front (18808) (+)
2	10-MD10 (GY/BK)	Speaker, left front (18808) (–)

C524

14A488

M80
Power window motor, driver side front (23395)

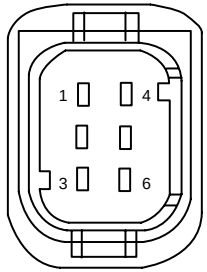

Pin	Circuit	Circuit Function
1	31-AJ82 (BK/WH)	Ground
2	10-AJ82 (GY/WH)	Signal 2 (Y–direction, reverse, downward)
3	32-AJ27 (WH/VT)	Switched between: Battery voltage, Ground or Open
4	7-AJ82 (YE/VT)	Voltage D.C. supplied at all times (sensor)
5	8-AJ82 (WH/VT)	Sensor signal
6	33-AJ27 (YE/VT)	Switched between: Battery voltage, Ground or Open