C360 (GY)

14A699

N422
Power seat switch, right

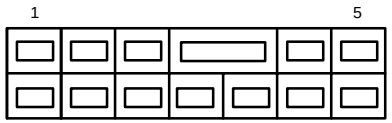

F12095

Pin	Circuit	Circuit function
1	(RD)	Voltage supplied at all times (overload protected)
2	(GN)	Backrest rearward
3	–	not used
4	(GY)	Fwd/Rwd motor, Rearward
5	(YE)	Backrest forward
6	(OG)	Fwd/Rwd motor, Forward
7	(BK)	Ground
8	–	not used
9	–	not used
10	–	not used
11	(RD)	Voltage supplied at all times (overload protected)
12	(BK)	Ground

C361 (WH)

14N104

A201
Trailer tow control unit

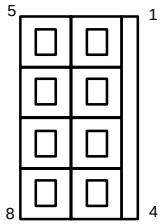

F08149

Pin	Circuit	Circuit function
1	LQ04 (RD/WH)	Voltage supplied at all times (overload protected)
2	LQ03 (RD/WH)	Voltage supplied at all times (overload protected)
3	LQE1 (BK)	Ground
4	LQ21 (YE/BK)	Brake pedal position switch (13480), input
5	LB31 (GN)	Turn lamps, switched power
6	LB32 (YE)	Turn lamps, switched power
7	LB33 (RD/GN)	Turn lamps, Left, switched power
8	LB34 (RD/WH)	Turn lamps, Right, switched power

C362

13A576



F04133

P56
Trailer tow

Pin	Circuit	Circuit function
1	LB31 (GN)	Turn lamps, switched power
2	LB32 (YE)	Turn lamps, switched power
3	LC33 (BN)	Tail lamp relay, switched output
4	LBE9 (WH)	Ground