C146 (BK)

* Early production
** Late production

15525

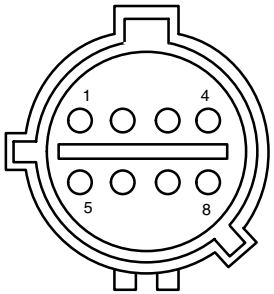

F08052

12A581

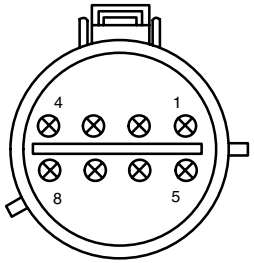

F08259

(1) 33 (WH/PK)
(2) 1138 (VT/WH)
(3) –
(4) 1093 (TN/RD)
(5) 295 (LB/PK)
(6) *1789 (VT/WH)
**140 (BK/PK)
(7) –
(8) –

C147 (BK)

12A581

Primary brake pressure sensor

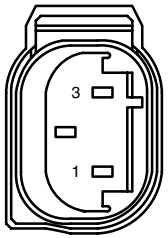

F03108

Pin	Circuit	Circuit function
1	3603 (RD)	Primary brake pressure sensor, Ground
2	3600 (RD/WH)	Primary brake pressure sensor, signal
3	3601 (WH/RD)	Primary brake pressure sensor, Power

C148 (BK)

12A581

Secondary brake pressure sensor

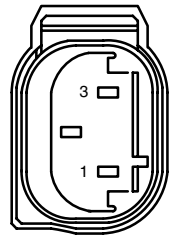

F03110

Pin	Circuit	Circuit function
1	1902 (RD)	Secondary brake pressure sensor, Power
2	1904 (GY/BK)	Secondary brake pressure sensor, Ground
3	1905 (GY)	Secondary brake pressure sensor, signal

C149 (BK)

12A581

Brake booster sensor

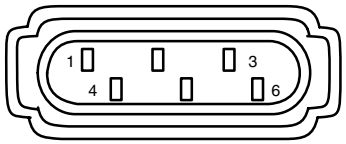

F06173

Pin	Circuit	Circuit function
1	1581 (PK/LB)	ABS control module (2C219) to Brake booster sensor, switch
2	1580 (WH/LG)	ABS control module (2C219) to Brake booster sensor, switch
3	1582 (LG/RD)	ABS control module (2C219) to Brake booster sensor, Solenoid +
4	1583 (BN/WH)	ABS control module (2C219) to Brake booster sensor, Solenoid –
5	547 (LG/YE)	Brake booster sensor, signal
6	–	not used