C2041b

14401

A208
Restraints Control
Module (RCM)

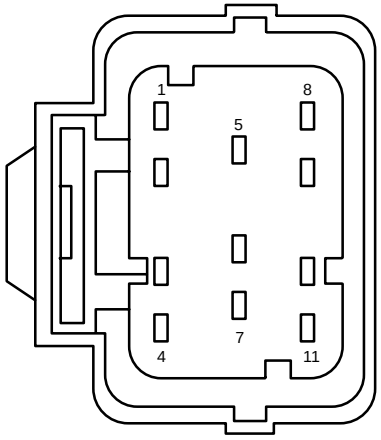

F11019

Pin	Circuit	Circuit function
1	–	not used
2	1257 (WH/LB)	Air bag – driver side impact – to module – feed
3	1258 (BN/LB)	Air bag – driver side impact – to module – return
4	–	not used
5	1259 (WH/YE)	Air bag – passenger side impact – to module – feed
6	1260 (BN/YE)	Air bag – passenger side impact – to module – return
7	–	not used
8	1261 (WH/LG)	Air bag – driver side impact – crash sensor to module – feed
9	1262 (BN/LG)	Air bag – driver side impact – crash sensor to module – return
10	1263 (WH)	Air bag – passenger side impact – crash sensor to module – feed
11	1264 (BN)	Air bag – passenger side impact – crash sensor to module – feed

C2047

14401

K2
Indicator flasher
relay (13350)

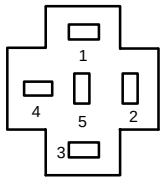

F05016

Pin	Circuit	Circuit function
1	383 (RD/WH)	Emergency warning flasher, feed
2	44 (LB)	Turn signal flasher, to turn signal switch
3	57 (BK)	Ground
4	294 (WH/LB)	Voltage supplied in Start and Run (overload protected)
5	385 (WH/RD)	Voltage supplied at all times (overload protected)

C2048

K115
Battery saver relay

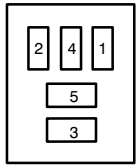

F05064

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	–	not used