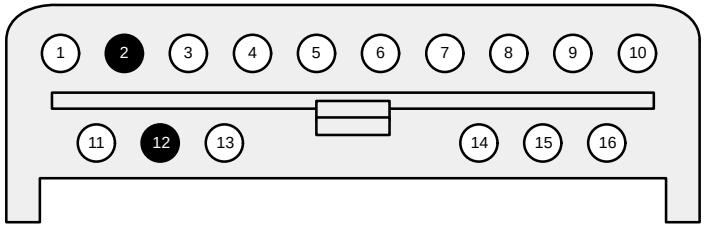

C351 (BLACK)
DRIVER SEAT MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	447 (OG/RD)	Memory Set - Seat Position Sensor (–)
2	–	NOT USED
3	446 (OG/WH)	Memory Set - Seat Position Sensor (+)
4	1472 (YE/WH)	Regulator Switch, Horizontal Motor LH
5	1473 (YE/LG)	Regulator Switch, Rear Motor LH
6	1470 (YE/LB)	Regulator Switch, Front Motor LH
7	1490 (LB/OG)	Pedal Backward
8	444 (LG/BK)	Seat Position Sensor (Rear)
9	443 (LG/RD)	Seat Position Sensor (Front)
10	442 (LG/OG)	Seat Position Sensor (Horizontal)
11	1469 (RD/LB)	Regulator Switch, Front Motor LH
12	–	NOT USED
13	1474 (RD/LG)	Regulator Switch, Front Motor LH
14	1471 (RD/WH)	Regulator Switch, Horizontal Motor LH
15	1491 (LB/YE)	Pedal Sensor
16	1489 (LB/BK)	Pedal Forward

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C228	14-3
C242	13-29
C243	13-28
C257	117-4

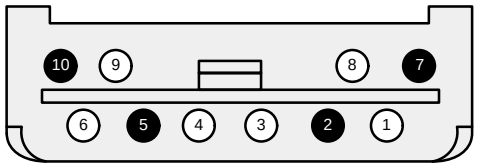

C503 (BLACK)
MEMORY SET SWITCH

PIN	CIRCUIT	CIRCUIT FUNCTION
1	270 (BN/OG)	Set Switch
2	–	NOT USED
3	268 (BK/OG)	Memory Switch #2
4	267 (BN/LG)	Memory Switch #1
5	–	NOT USED
6	956 (OG/LG)	Power (Hot at All Times)
7	–	NOT USED
8	272 (WH/OG)	LED in Lamp Drive
9	875 (BK/LB)	Ground
10	–	NOT USED

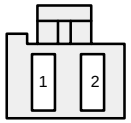

C307
DRIVER SEAT MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	566 (DG)	Power
2	57 (BK)	Ground