C612

14630

Y18
Speaker, right front
(18808)

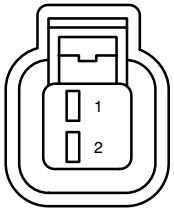

F02069

Pin	Circuit	Circuit function
1	805 (WH/LG)	Speaker, right front (18808) +
2	811 (DG/OG)	Speaker, right front (18808) –

C615 (NA)

14630

M221
Exterior rear view
mirror, passenger
side (17683)

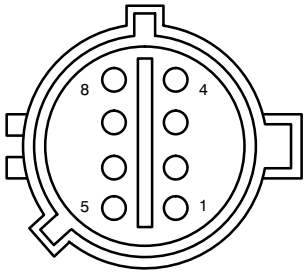

F08052

Pin	Circuit	Circuit function
1	544 (VT)	Up/Down mirror movement
2	543 (DG)	Voltage supplied at all times (overload protected)
3	–	not used
4	–	not used
5	945 (YE/BK)	Mirror motor, feed
6	57 (BK)	Ground
7	55 (BK/PK)	Cargo lamp, output
8	–	not used

C701

14633

N111
Window adjust
switch, left rear
(14A412)

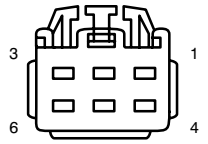

F06213

Pin	Circuit	Circuit function
1	316 (YE/LB)	Window switch, feed, left rear, Up
2	885 (YE/LB)	Window switch to, Window motor, left rear
3	170 (RD/LB)	Window lockout, switched power, output
4	–	not used
5	884 (YE/BK)	Window switch to, Window motor, left rear
6	317 (GY/OG)	Window switch, feed, left rear, Down

C702

14633

Y17
Speaker, left rear
(18808)

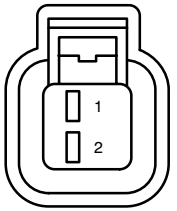

F02069

Pin	Circuit	Circuit function
1	800 (GY/LB)	Speaker, left rear (18808) +
2	801 (TN/YE)	Speaker, left rear (18808) –