C541 (BK)

14A005

Door lock switch,
driver side (14028)

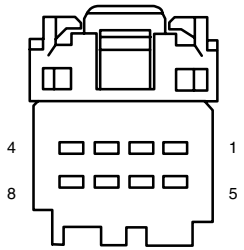

F08281

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	19 (LB/RD)	Illumination, Power
3	119 (PK/YE)	Door lock switch, input
4	57 (BK)	Ground
5	–	not used
6	–	not used
7	120 (PK/LG)	Door unlock, switch, input
8	–	not used

C577 (NA)

14A005

Exterior rear view
mirror switch
(17B676)

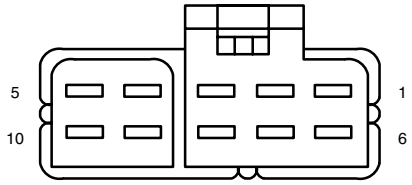

F10127

Pin	Circuit	Circuit function
1	1037 (VT/LG)	Power mirror fold switch, In, feed
2	875 (BK/LB)	Ground
3	1477 (YE/BK)	Power mirror switch, signal, common
4	1479 (DB/OG)	Left mirror, Up/Down mirror movement, signal
5	1475 (PK/OG)	Right mirror, Up/Down mirror movement, signal
6	1038 (VT/YE)	Power mirror fold switch, Out, feed
7	956 (OG/LG)	Voltage supplied at all times (overload protected)
8	–	not used
9	1478 (DG/OG)	Right mirror, Right/Left mirror movement, signal
10	1476 (RD/OG)	Left mirror, Right/Left mirror movement, signal

C602 (BK)

14630

Door ajar switch,
right front

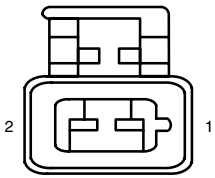

F02379

Pin	Circuit	Circuit function
1	345 (BK/PK)	Door ajar switch, right front, signal
2	57 (BK)	Ground