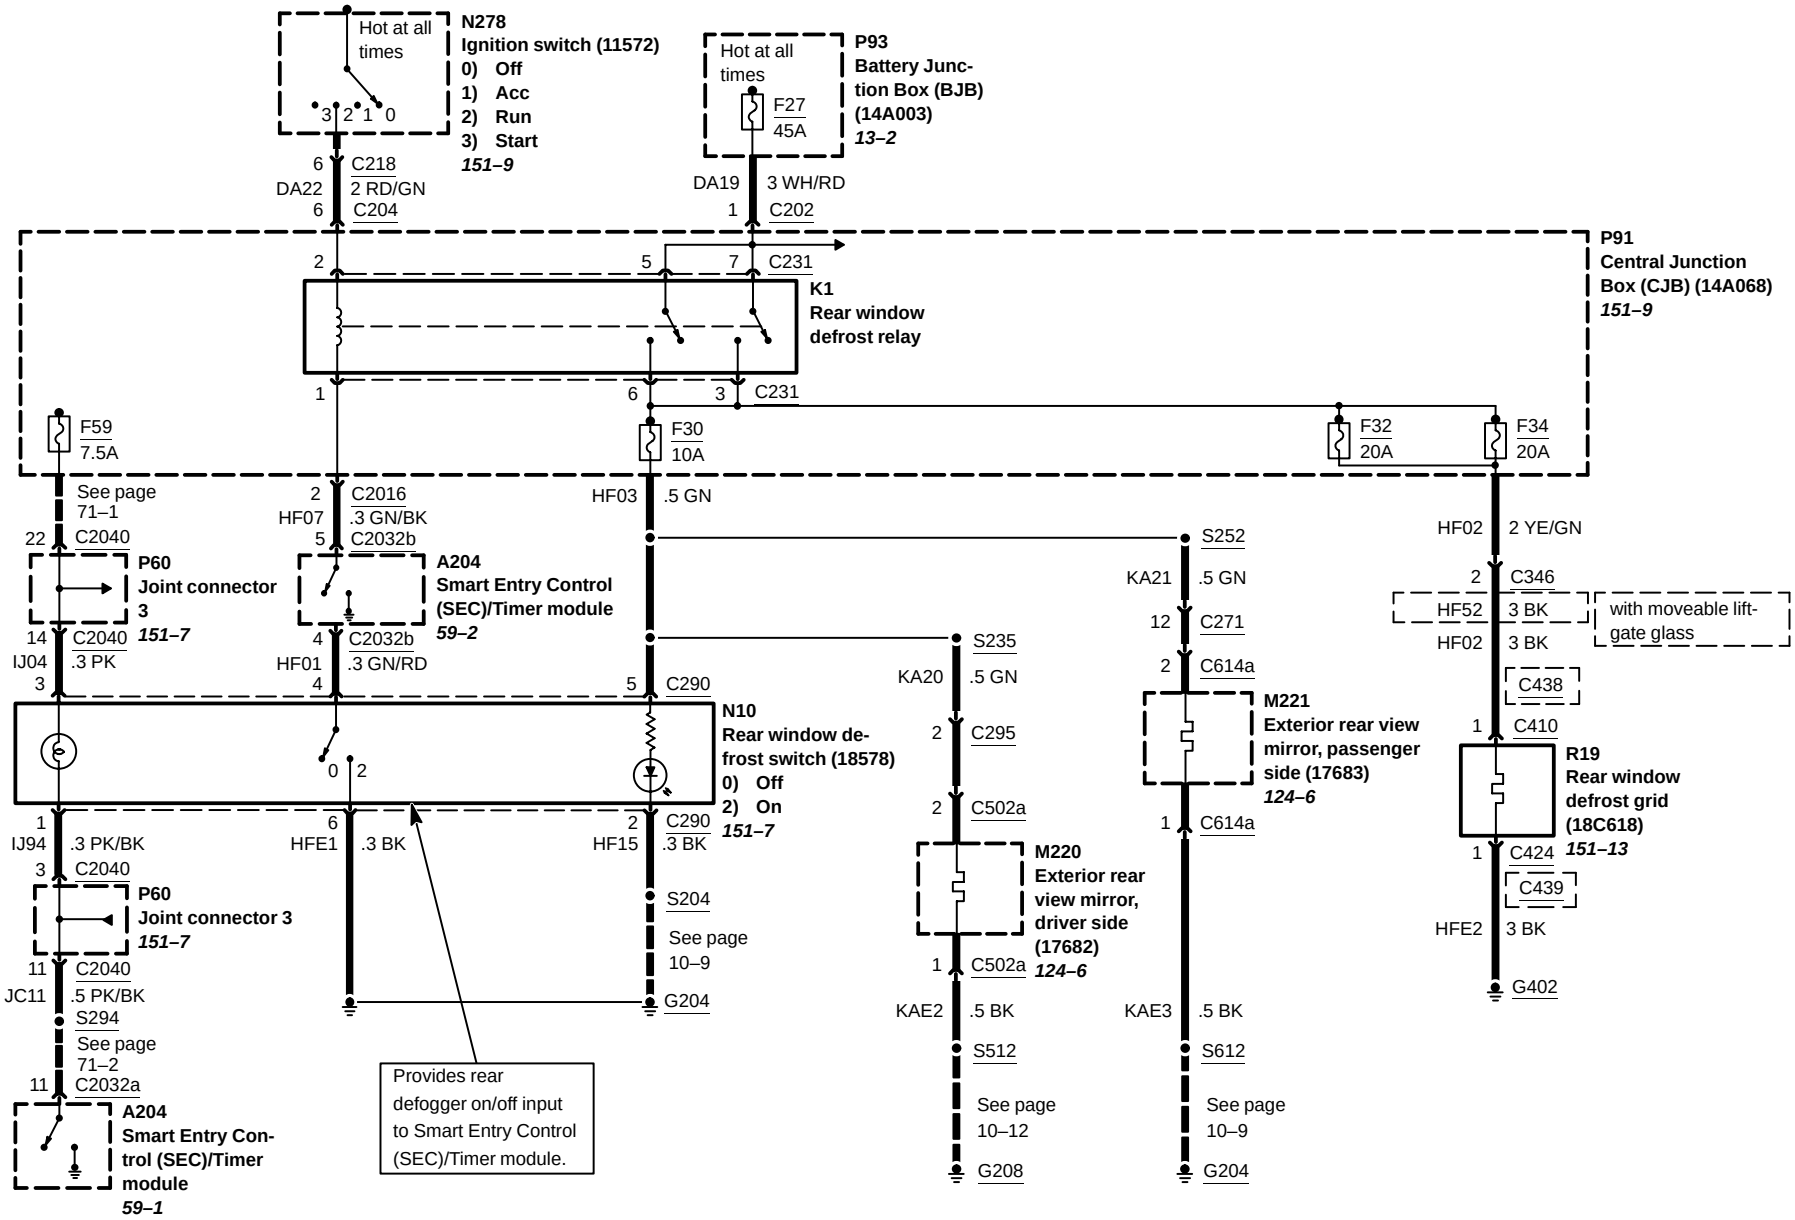
N278
Ignition switch (11572)
0) Off
1) Acc
2) Run
3) Start
151–9
Hot at all times
3 2 1 0
6 C218
DA22 2 RD/GN
6 C204
P93
Battery Junction Box (BJB) (14A003)
13–2
Hot at all times
F27 45A
DA19 3 WH/RD
1 C202
P91
Central Junction Box (CJB) (14A068)
151–9
2 5 7 C231
K1
Rear window defrost relay
1 6 3 C231
F59 7.5A
F30 10A
F32 20A
F34 20A
See page 71–1
22 C2040
P60
Joint connector 3
151–7
14 C2040
IJ04 .3 PK
3
2 C2016
HF07 .3 GN/BK
5 C2032b
A204
Smart Entry Control (SEC)/Timer module
59–2
4 C2032b
HF01 .3 GN/RD
4
HF03 .5 GN
5 C290
N10
Rear window defrost switch (18578)
0) Off
2) On
151–7
0 2
1
IJ94 .3 PK/BK
3 C2040
P60
Joint connector 3
151–7
11 C2040
JC11 .5 PK/BK
S294
See page 71–2
11 C2032a
A204
Smart Entry Control (SEC)/Timer module
59–1
6
HFE1 .3 BK
2
HF15 C290 .3 BK
S204
See page 10–9
G204
Provides rear defogger on/off input to Smart Entry Control (SEC)/Timer module.
S235
KA20 .5 GN
2 C295
2 C502a
M220
Exterior rear view mirror, driver side (17682)
124–6
1 C502a
KAE2 .5 BK
S512
See page 10–12
G208
S252
KA21 .5 GN
12 C271
2 C614a
M221
Exterior rear view mirror, passenger side (17683)
124–6
1 C614a
KAE3 .5 BK
S612
See page 10–9
G204
HF02 2 YE/GN
2 C346
HF52 3 BK
HF02 3 BK
with moveable liftgate glass
C438
1 C410
R19
Rear window defrost grid (18C618)
151–13
1 C424
C439
HFE2 3 BK
G402