C171

12B637

B48
Heated Oxygen
Sensor (HO2S) #11
(9F472)

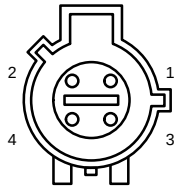

F04124

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
	361 (RD)	Voltage supplied in Start and Run (overload protected) – Natural Gas Vehicle (NGV)
2	388 (YE/LB)	Heated Oxygen Sensor (HO2S) #11 (9F472), heater
3	359 (GY/RD)	signal, return
4	74 (GY/LB)	Heated Oxygen Sensor (HO2S) #11 (9F472), input

C172

12B637

B47
Heated Oxygen
Sensor (HO2S) #21
(9F472)

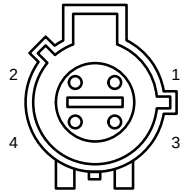

F04124

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
	361 (RD)	Voltage supplied in Start and Run (overload protected) – Natural Gas Vehicle (NGV)
2	388 (YE/LB)	Heated Oxygen Sensor (HO2S) #21 (9F472), heater
3	359 (GY/RD)	signal, return
4	94 (RD/BK)	Heated Oxygen Sensor (HO2S) #21 (9F472), input