## C1312

### 12B637

Y207
Fuel injector 7
(9F593)

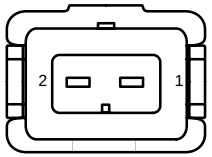


F02089

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1171 (WH) | Fuel injector 7, control – Natural Gas Vehicle (NGV) |
| 2 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |

## C1313

### 12B637

Y209
Fuel injector 8
(9F593)

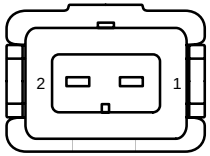


F02089

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1172 (YE) | Fuel injector 8, control – Natural Gas Vehicle (NGV) |
| 2 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |

## C1325

### 14290

K391
Police power relay

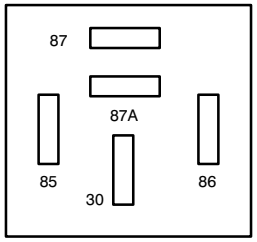


F05129

| Pin | Circuit | Circuit function |
|---|---|---|
| 30 | 297 (BK/LG) | Police power relay, switched power |
| 85 | 57 (BK) | Ground |
| 86 | 296 (WH/VT) | Voltage in Run or Accessory (overload protected) |
| 87 | 37 (YE) | Voltage supplied at all times (overload protected) |
| 87A | – | not used |