C605 (GN)

14630

N205
Door lock switch, passenger side

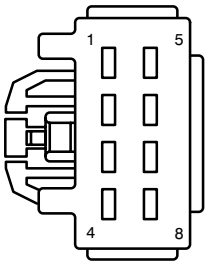

F08165

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	120 (PK/LG)	Door unlock relay, control
3	120 (PK/LG)	Door unlock relay, control
	1384 (LB)	Door unlock, output
	118 (PK/OG)	Door unlock, output
4	57 (BK)	Ground
	171 (BK/WH)	Voltage supplied at all times (overload protected)
5	705 (LG/OG)	Battery saver relay, switched power
6	–	not used
7	119 (PK/YE)	Door lock relay, control
	1383 (RD)	Door lock, output
	117 (PK/BK)	Door lock, output
8	119 (PK/YE)	Door lock relay, control

C612

14630

Y18
Speaker, right front

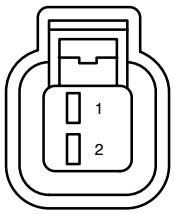

F02069

Pin	Circuit	Circuit Function
1	805 (WH/LG)	Speaker, right front +
2	811 (DG/OG)	Speaker, right front –

C615

14630

M221
Exterior rear view mirror, passenger side

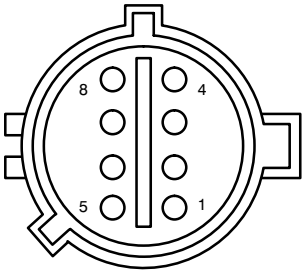

F08052

Pin	Circuit	Circuit Function
1	544 (VT)	Up/Down mirror movement
2	543 (DG)	Voltage supplied at all times (overload protected)
3	–	not used
4	–	not used
5	945 (YE/BK)	Mirror motor, feed
6	57 (BK)	Ground
7	55 (BK/PK)	Cargo lamp, output
8	–	not used

C608 (GY)

14630

M79
Power window motor, passenger side front



F02073

Pin	Circuit	Circuit Function
1	333 (YE/RD)	Window motor, feed, Up
2	334 (RD/YE)	Window motor, feed, Down