C521

14A005

M220
Exterior rear view mirror, driver side (17682)

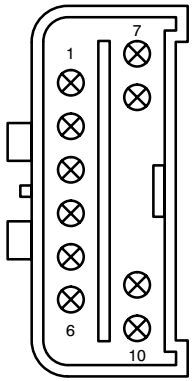

F10025

Pin	Circuit	Circuit function
1	540 (RD)	Right/Left mirror movement
2	542 (YE)	Mirror motor, feed
3	541 (DB)	Up/Down mirror movement
4	3 (LG/WH)	Turn signal
5	57 (BK)	Ground
6	59 (DG/VT)	Defrost
7	–	not used
8	–	not used
9	–	not used
10	–	not used

C523

14A005

Y28
Speaker, left front (18808)

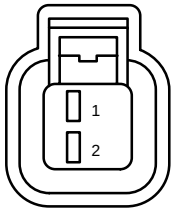

F02069

Pin	Circuit	Circuit function
1	804 (OG/LG)	Speaker, left front (18808) +
2	813 (LB/WH)	Speaker, left front (18808) –

C524

14A005

M80
Power window motor, driver side front (23395)



F02457

Pin	Circuit	Circuit function
1	992 (WH/BK)	Master window adjust switch (14529), feed, Up
2	991 (TN/LB)	Master window adjust switch (14529), feed, Down

C525

14A005

M241
Door lock actuator, left front

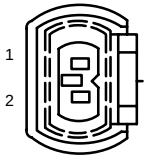

F02116

Pin	Circuit	Circuit function
1	163 (RD/OG)	Driver door unlock relay, switched power
	118 (PK/OG)	Door unlock, output – without remote keyless entry
2	117 (PK/BK)	Door lock, output

C526

14A005

N239
Door ajar switch, driver side front (14018)

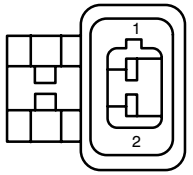

F02117

Pin	Circuit	Circuit function
1	765 (YE/BK)	Anti–theft, switch sense
	759 (LG/YE)	Anti–theft, switch sense – without remote keyless entry
2	57 (BK)	Ground