C2093 (BK)

14401

Remote solenoid assembly

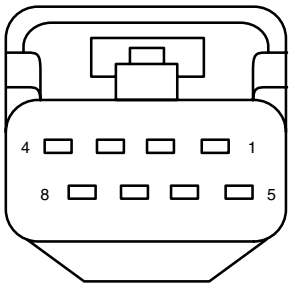

F08159

Pin	Circuit	Circuit function
1	1957 (LB/RD)	Remote solenoid assembly, return
2	1952 (OG/LG)	Remote solenoid assembly, Circuit 1
3	1953 (WH/VT)	Remote solenoid assembly, Circuit 2
4	1954 (DG/VT)	Remote solenoid assembly, Circuit 3
5	1955 (DB/OG)	Remote solenoid assembly, Circuit 4
6	1956 (LB/WH)	Remote solenoid assembly, Circuit 5
7	773 (DG/OG)	Remote solenoid assembly, Circuit 6
8	–	not used

C2096 (GY)

14B079

Floor shifter

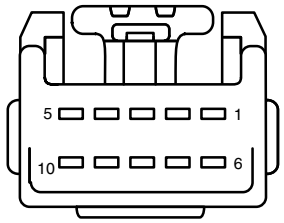

F10091

Pin	Circuit	Circuit function
1	810 (RD/LG)	Brake pedal position switch (13480), output
2	1003(GY/YE)	Voltage supplied in Start and Run (overload protected)
3	3410 (YE)	Key removal inhibit solenoid, control
4	235 (RD/BK)	Instrument illumination, feed
5	224 (TN/WH)	PCM, to transmission overdrive cancel switch
6	57 (BK)	Ground
7	1459 (YE/WH)	Voltage supplied at all times (overload protected)
8	–	not used
9	–	not used
10	–	not used

C2108

14A005

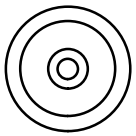

F01051

14401



F01055

(1) (OG)