C3051

14A005

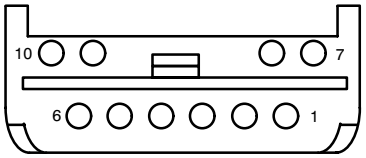

F10009

14A005

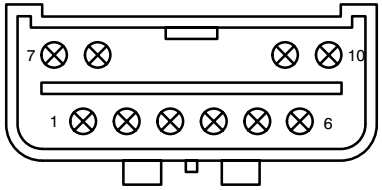

F10025

(1)
(2) 482 (WH/PK)
(3) 140 (BK/PK)
(4) 57 (BK)
(5) 705 (LG/OG)
(6) 238 (DG/YE)
(7)
(8)
(9)
(10) 605 (RD)

C3065

14A699

N466
Safety belt buckle switch, driver



F02433

Pin	Circuit	Circuit function
1	85(BN/LB)	Safety belt buckle switch, driver, signal
2	1558(TN/BK)	Sensor signal return (reference/ground)

C3066

14A699

N467
Safety belt buckle switch, passenger

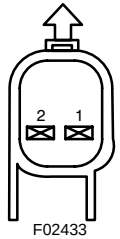

F02433

Pin	Circuit	Circuit function
1	85(BN/LB)	Safety belt buckle switch, passenger, signal
2	1558(TN/BK)	Sensor signal return (reference/ground)

C3133

14A005

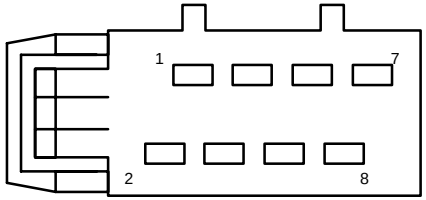

F08112

14A005

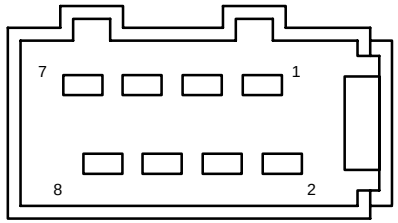

F08114

(1) 170 (RD/LB)
(2) 316 (YE/LB)
(3) 317 (GY/OG)
(4) 118 (PK/BK)
(5) 53 (BK/LB)
(6) 117 (PK/BK)
(7) 627 (BK/OG)
(8) 57 (BK)