C466

14405

A14
Subwoofer amplifier
(18C804)

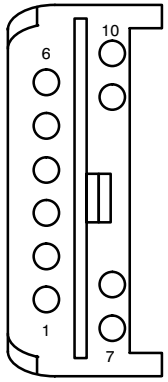

F10009

Pin	Circuit	Circuit function
1	174 (GY/BK)	Radio (18806) – Subwoofer, Low, mute
2	57 (BK)	Ground
3	–	not used
4	–	not used
5	720 (RD/YE)	Voltage supplied at all times (overload protected)
6	–	not used
7	169 (LG/BK)	Radio (18806) – Subwoofer, Low, +
	800 (GY/LB)	Speaker, left rear (18808) –
8	172 (LB/RD)	Radio (18806) – Subwoofer, Low, –
	801 (TN/YE)	Speaker, left rear (18808) +
9	803 (BN/PK)	Speaker, right rear (18808) –
10	802 (OG/RD)	Speaker, right rear (18808) +

C474

14405

O21
Power point, rear
(19G247)

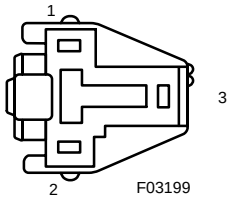

F03199

Pin	Circuit	Circuit function
1	212 (DB)	Voltage supplied at all times (overload protected)
2	–	not used
3	57 (BK)	Ground

C475

13B472

E174
High mounted sto-
plamp (13A613)

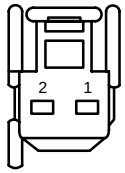

F02307

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	511 (LG)	Brake pedal position switch (13480), to stoplamps

C476

18C673

M218
Rear wiper motor
assembly



F03072

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	406 (BN/WH)	Voltage supplied in Start and Run (overload protected)
3	411 (BK/LB)	Rear wiper relay, switched output