C1051

12A581

K4
Fuel pump relay

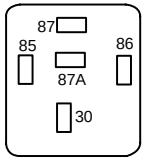

F05147

Pin	Circuit	Circuit function
30	37 (YE)	Voltage supplied at all times (overload protected)
85	361 (RD)	Voltage supplied at all times (overload protected)
86	926 (LB/OG)	Fuel pump relay, control
87	238 (DG/YE)	Fuel pump relay, switched power, output
87A	–	not used

C1061

12B637/9D930

B227
Engine Coolant
Temperature (ECT)
sender

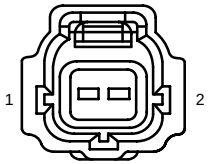

F02091

Pin	Circuit	Circuit function
1	39 (RD/WH)	Engine Coolant Temperature (ECT) sender, input
2	45	Ground

C1065

9D930

T1
Ignition coil (12029)

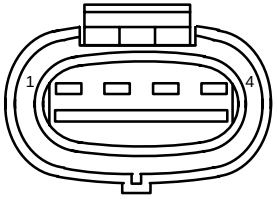

F04215

Pin	Circuit	Circuit function
1	526 (DB/LG)	PCM, to, Ignition coil (12029)
2	528 (PK/WH)	PCM, to, Ignition coil (12029)
3	527 (RD/LB)	PCM, to, Ignition coil (12029)
4	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)

C1066

12B637/9D930

Y133
Idle Air Control
(IAC) valve (9F715)

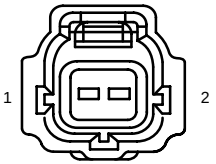

F02091

Pin	Circuit	Circuit function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	264 (WH/LB)	Idle Air Control (IAC) valve (9F715), control

C1068

12B637

B257
Differential Pressure
Feedback EGR
(DPFE) sensor
(9J460)

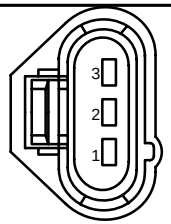

F03071

Pin	Circuit	Circuit function
1	351 (BN/WH)	Reference, voltage
2	359 (GY/RD)	signal, return
3	352 (BN/LG)	Differential Pressure Feedback EGR (DPFE) sensor, input

C1072

9D930

Y205
EGR vacuum regu-
lator solenoid
(9J459)

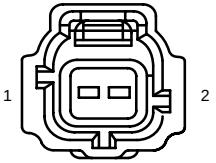

F02101

Pin	Circuit	Circuit function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	360 (BN/PK)	EGR Vacuum Regulator (EVR), control