Component Testing – Window adjust switch, left rear

Schematic

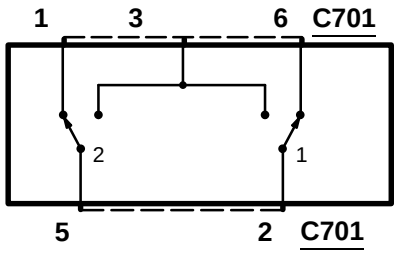

N111
Window adjust switch, left rear
1) Up
2) Down

Terminals

C701

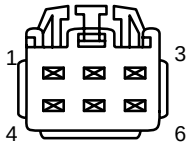

F06213

Component testing procedure

Circuit to test	Connect self–powered test light or ohmmeter to terminals	Move switch to these positions	A good switch will indicate
Window adjust switch	2 and 3	Up	Closed circuit
	5 and 3	Down	Closed circuit
	1 and 5 6 and 2	Rest	Closed circuit