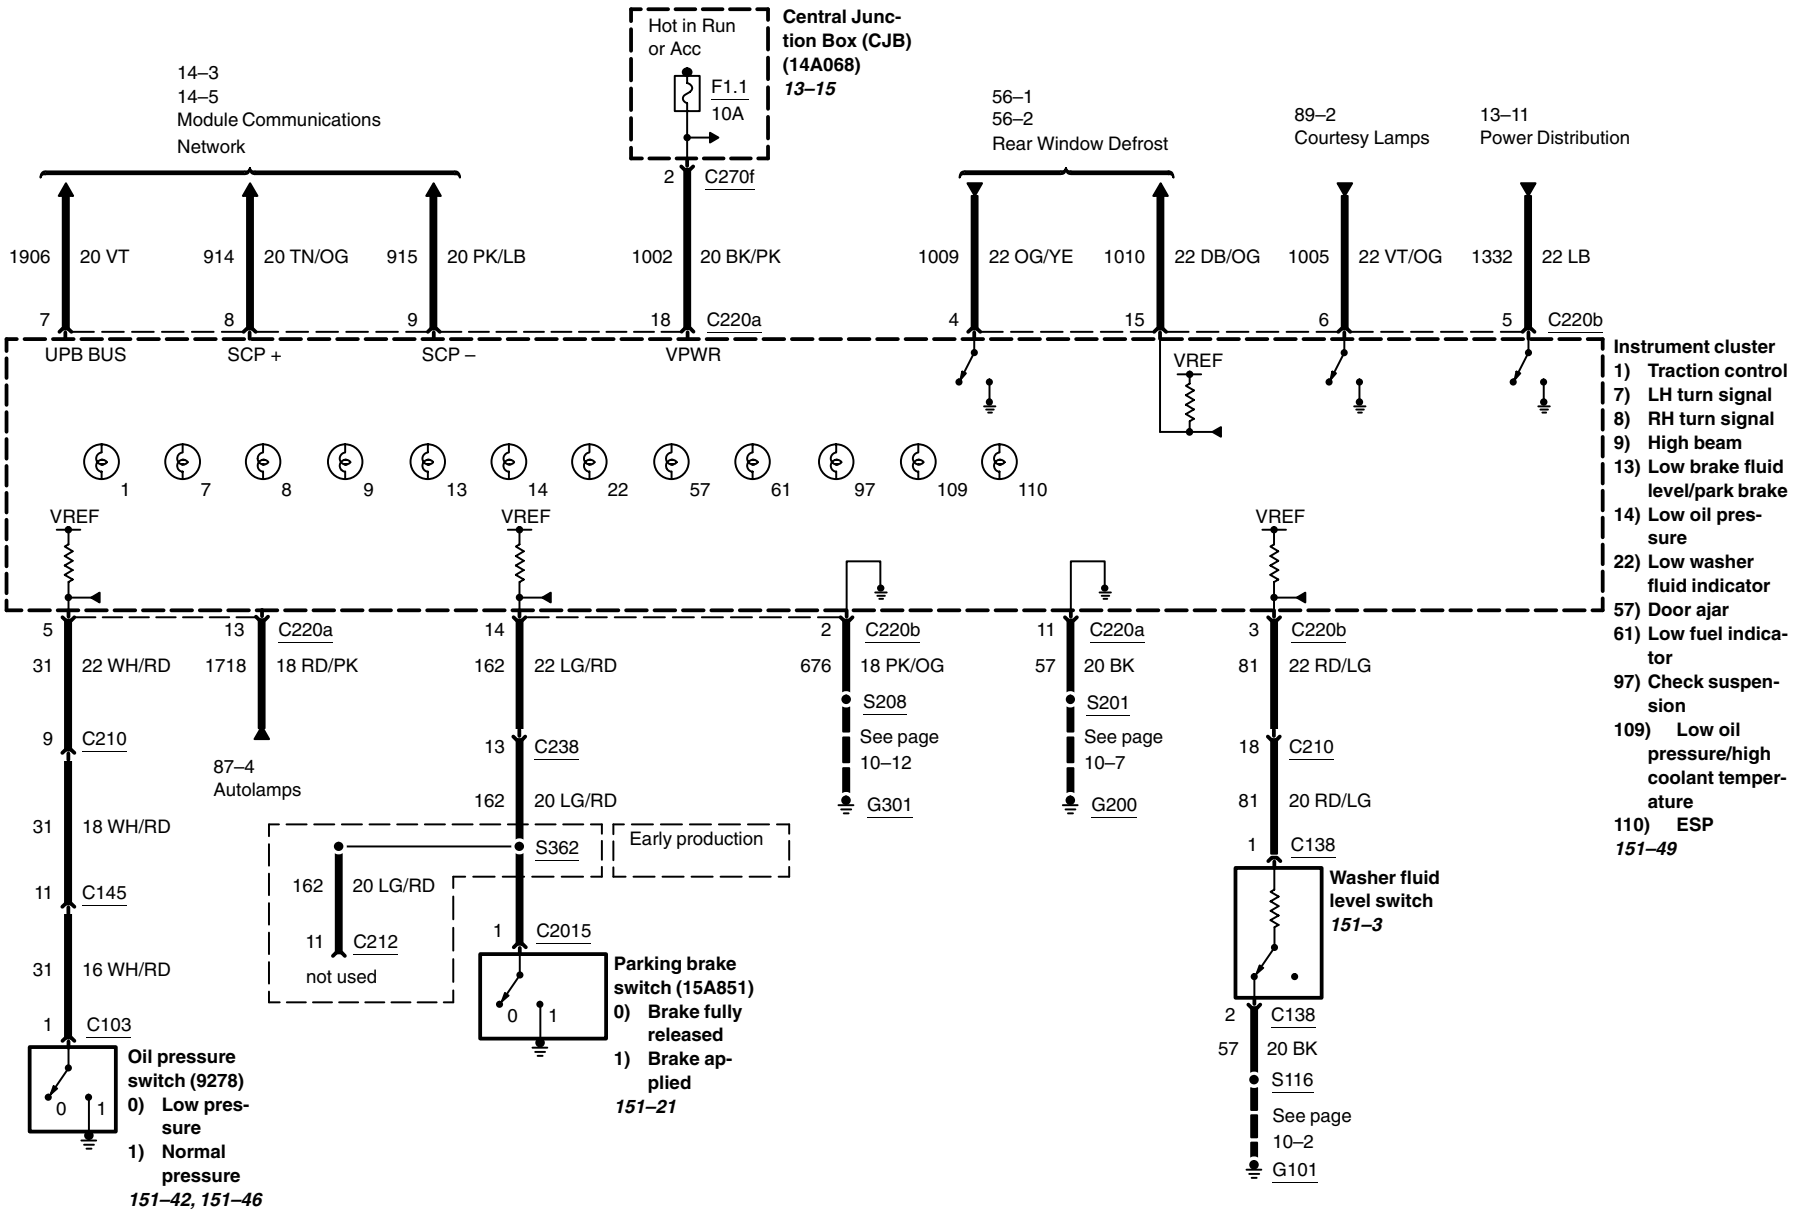
Hot in Run or Acc
F1.1 10A
Central Junction Box (CJB) (14A068)
13–15
14–3
14–5
Module Communications Network
56–1
56–2
Rear Window Defrost
89–2
Courtesy Lamps
13–11
Power Distribution
1906 20 VT
914 20 TN/OG
915 20 PK/LB
1002 20 BK/PK
1009 22 OG/YE
1010 22 DB/OG
1005 22 VT/OG
1332 22 LB
2 C270f
7 8 9 18 C220a
4 15 6 5 C220b
UPB BUS
SCP +
SCP –
VPWR
VREF
Instrument cluster
1) Traction control
7) LH turn signal
8) RH turn signal
9) High beam
13) Low brake fluid level/park brake
14) Low oil pressure
22) Low washer fluid indicator
57) Door ajar
61) Low fuel indicator
97) Check suspension
109) Low oil pressure/high coolant temperature
110) ESP
151–49
1 7 8 9 13 14 22 57 61 97 109 110
5 31 22 WH/RD
9 C210
31 18 WH/RD
11 C145
31 16 WH/RD
1 C103
Oil pressure switch (9278)
0) Low pressure
1) Normal pressure
151–42, 151–46
13 C220a
1718 18 RD/PK
87–4
Autolamps
14 162 22 LG/RD
13 C238
162 20 LG/RD
S362
Early production
162 20 LG/RD
11 C212
not used
1 C2015
Parking brake switch (15A851)
0) Brake fully released
1) Brake applied
151–21
2 C220b
676 18 PK/OG
S208
See page 10–12
G301
11 C220a
57 20 BK
S201
See page 10–7
G200
3 C220b
81 22 RD/LG
18 C210
81 20 RD/LG
1 C138
Washer fluid level switch
151–3
2 C138
57 20 BK
S116
See page 10–2
G101