C247

14A005

R76
Window heater, right

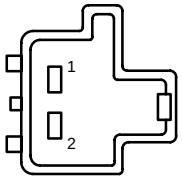

F02050

Pin	Circuit	Circuit function
1	30S-HB42 (RD/YE)	Voltage supplied at all times (not overload protected), Switched
2	–	not used

C248

14401

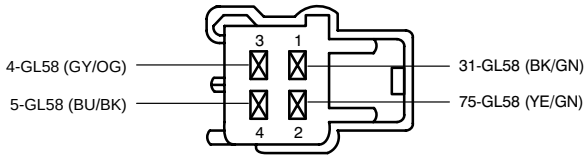

F04105

14B242

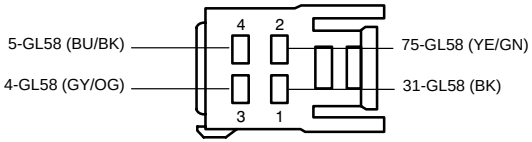

F04106

C250

14401

N278
Ignition switch
(11572)

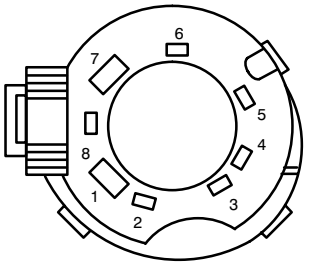

F087165

Pin	Circuit	Circuit function
1	30-BB9 (RD)	Voltage supplied at all times (not overload protected)
2	20-DD6 (PK/WH)	Voltage, hot in run only
3	50-DD5 (GY/BK)	Voltage, ignition switch in Start (not overload protected)
4	75-DD1 (YE)	Voltage: Ignition switch in Accessory or Run
5	15-DD4 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
6	20-DD7 (PK/YE)	Voltage, hot in run only
7	30-DA5 (RD)	Voltage supplied at all times (not overload protected)
	30-BB20 (RD)	Voltage supplied at all times (not overload protected)
8	30S-GM7 (RD/WH)	Voltage supplied at all times (not overload protected), Switched