C420d

14A005

A212
Rear Electronic
Module (REM)

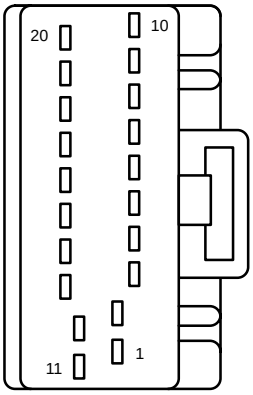

F20017

Pin	Circuit	Circuit Function
1	15S-DK32 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), Switched
2	31-DK30C (BK/OG)	Ground
3	29-DK31 (OG/BK)	Voltage supplied at all times (overload protected)
4	31S-DK30 (BK/OG)	Ground, Switched
5	91S-GL13 (BN)	Ground, Switched
6	–	not used
7	8-AJ24 (WH)	Sensor signal
8	–	not used
9	–	not used
10	–	not used
11	15S-RG2A (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), Switched
12	31S-RG2A (BK/RD)	Ground, Switched
13	–	not used
14	–	not used
15	8-GA7 (WH/RD)	Sensor signal
16	8-GA25 (WH/BU)	Sensor signal
17	31S-GL19 (BK/GN)	Ground, Switched
18	–	not used
19	–	not used
20	10-AJ24 (GY)	Signal 2 (Y–direction, reverse, downward)

C420e

14A005

A212
Rear Electronic
Module (REM)

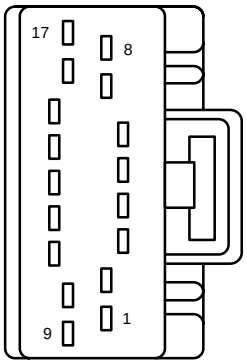

F17001

Pin	Circuit	Circuit Function
1	31S-LG21 (BK/GN)	Ground, Switched
2	31S-LG14 (BK/OG)	Ground, Switched
3	31S-LG12 (BK/YE)	Ground, Switched
4	31S-LG19 (BK/BU)	Ground, Switched
5	31S-LF4A (BK/BU)	Ground, Switched
6	31S-LF2 (BK/BU)	Ground, Switched
7	–	not used
8	–	not used
9	31S-LG9 (BK/GN)	Ground, Switched
10	31S-LG16 (BK/RD)	Ground, Switched
11	–	not used
12	–	not used
13	–	not used
14	–	not used
15	–	not used
16	–	not used
17	31S-LG6 (BK/YE)	Ground, Switched