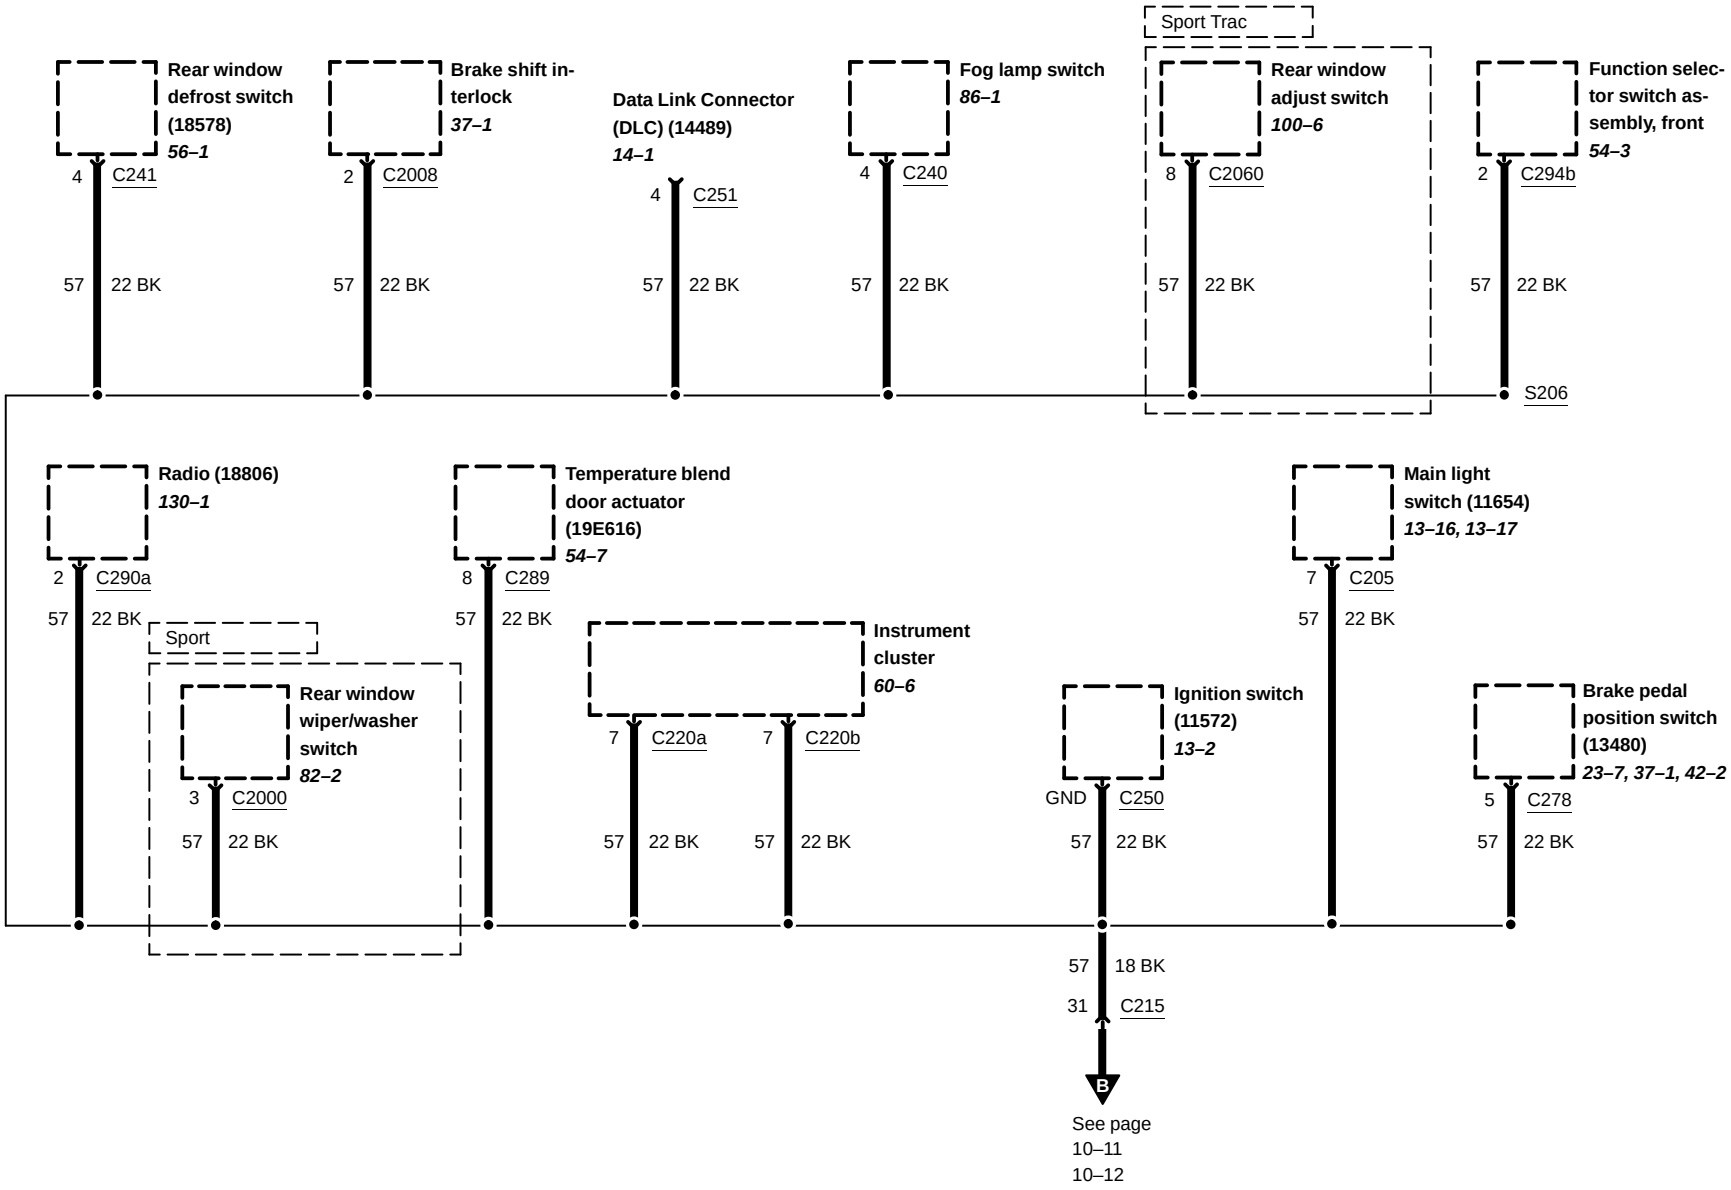
Rear window defrost switch (18578) 56–1
4 C241
57 22 BK
Brake shift interlock 37–1
2 C2008
57 22 BK
Data Link Connector (DLC) (14489) 14–1
4 C251
57 22 BK
Fog lamp switch 86–1
4 C240
57 22 BK
Sport Trac
Rear window adjust switch 100–6
8 C2060
57 22 BK
Function selector switch assembly, front 54–3
2 C294b
57 22 BK
S206
Radio (18806) 130–1
2 C290a
57 22 BK
Sport
Rear window wiper/washer switch 82–2
3 C2000
57 22 BK
Temperature blend door actuator (19E616) 54–7
8 C289
57 22 BK
Instrument cluster 60–6
7 C220a
57 22 BK
7 C220b
57 22 BK
Ignition switch (11572) 13–2
GND C250
57 22 BK
Main light switch (11654) 13–16, 13–17
7 C205
57 22 BK
Brake pedal position switch (13480) 23–7, 37–1, 42–2
5 C278
57 22 BK
57 18 BK
31 C215
B
See page
10–11
10–12