C442

14A005

K322
SSP 2 relay

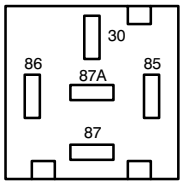

F05107

Pin	Circuit	Circuit Function
30	30-DG54 (RD/GN)	Voltage supplied at all times (not overload protected)
85	31S-DG53 (BK/OG)	Ground, Switched
86	30-DG53 (RD/OG)	Voltage supplied at all times (not overload protected)
87	30-DD2 (RD/BU)	Voltage supplied at all times (not overload protected)
87A	–	not used

C444

14A005

K323
SSP 3 relay

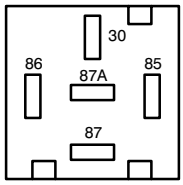

F05107

Pin	Circuit	Circuit Function
30	30-DG56 (RD/WH)	Voltage supplied at all times (not overload protected)
85	31S-DG55 (BK/RD)	Ground, Switched
86	30-DG55 (RD/BK)	Voltage supplied at all times (not overload protected)
87	30S-DB15 (RD/OG)	Voltage supplied at all times (not overload protected), Switched
87A	–	not used

C443

14A005

K1
Rear window defrost relay

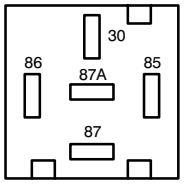

F05107

Pin	Circuit	Circuit Function
30	30-HB23B (RD/WH)	Voltage supplied at all times (not overload protected)
85	91S-HB23 (BN/WH)	Ground, Switched
86	30-HB23A (RD/WH)	Voltage supplied at all times (not overload protected)
87	15S-DA13 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), Switched
87A	–	not used

C445

14A005

K324
SSP 4 relay

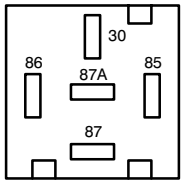

F05107

Pin	Circuit	Circuit Function
30	30-DG58 (RD/BU)	Voltage supplied at all times (not overload protected)
85	31S-DG57 (BK/YE)	Ground, Switched
86	30-DG57 (RD/YE)	Voltage supplied at all times (not overload protected)
87	30S-DB16 (RD/GN)	Voltage supplied at all times (not overload protected), Switched
87A	–	not used