C504b

14631

N447
Master window adjust switch

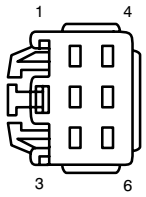

F06213

Pin	Circuit	Circuit Function
1	170 (RD/LB)	Window lockout, switched power, output
2	57 (BK)	Ground
3	319 (YE/BK)	Window switch, feed, right rear, Up
4	400 (LB/BK)	Window safety relay, switched power, output
5	317 (GY/OG)	Window switch, feed, left rear, Down
6	316 (YE/LB)	Window switch, feed, left rear, Up

C505 (GN)

14631

N204
Door lock switch, driver side

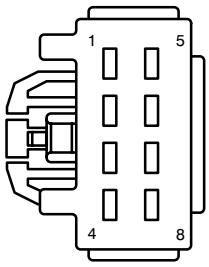

F08165

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	57 (BK)	Ground
3	120 (PK/LG)	Door unlock relay, control
4	57 (BK)	Ground
	171 (BK/WH)	Voltage supplied at all times (overload protected)
5	705 (LG/OG)	Battery saver relay, switched power
6	–	not used
7	119 (PK/YE)	Door lock relay, control
8	57 (BK)	Ground