C120

14290

Y69
Power steering
valve solenoid
(3783)

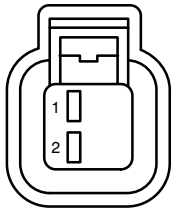

F02069

Pin	Circuit	Circuit function
1	8-CE9 (WH/GN)	Sensor signal
2	9-CE9 (BN/GN)	Sensor signal return (reference/ground)

C121

14290/12B637

N96
Power steering
pressure switch

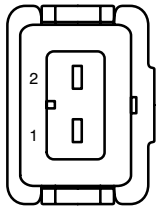

F02089

Pin	Circuit	Circuit function
1	9-CE6 (BN)	Sensor signal return (reference/ground)
2	8-CE6 (WH)	Sensor signal

C122

14290

M87
Speed control servo
(9C735)

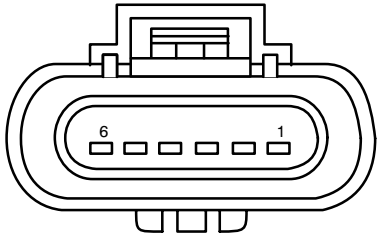

F06069

Pin	Circuit	Circuit function
1	15S-PG12 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), Switched
2	10-PG21 (GY/OG)	Signal 2 (Y–direction, reverse, downward)
3	8-PG21 (WH/GN)	Sensor signal
4	10-PG12 (GY/WH)	Signal 2 (Y–direction, reverse, downward)
5	8-PG12 (WH/VT)	Sensor signal
6	29S-PG16 (OG/YE)	Voltage supplied at all times (overload protected), Switched

C123

14290

Y134
EVAP canister
purge valve

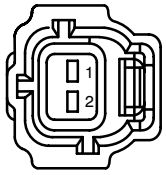

F02103

Pin	Circuit	Circuit function
1	15S-RL25 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), Switched
2	91S-RL25 (BN/RD)	Ground, Switched