C2089

14401

N449
Adjustable pedal switch

* = without memory
** = with memory

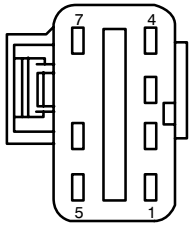

F07103

Pin	Circuit	Circuit function
1	*1489 (LB/BK)	Adjustable pedal motor (2C429)
	**1493 (PK/BK)	Motor position, Forward
2	*1567 (RD/LB)	Voltage supplied at all times (overload protected)
	**676 (PK/OG)	Ground
3	*57 (BK)	Ground
4	57 (BK)	Ground, Illumination
5	19 (LB/RD)	Illumination +
6	57 (BK)	Ground
7	*1490 (LB/OG)	Adjustable pedal motor (2C429)
	**1492 (LB/RD)	Motor position, Rearward

C2093

14401

A283
Remote solenoid assembly

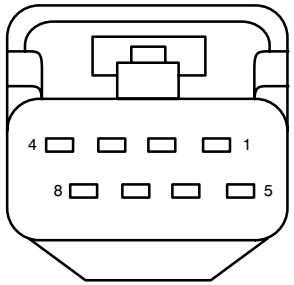

F08159

Pin	Circuit	Circuit function
1	1112 (WH/LB)	common
2	1107 (WH)	Solenoid #1, control
3	1108 (TN/WH)	Solenoid #2, control
4	1109 (OG/BK)	Solenoid #3, control
5	1110 (LG/VT)	Solenoid #4, control
6	1111 (VT)	Solenoid #5, control
7	–	not used
8	–	not used