C520

14631

M220
Exterior rear view mirror, driver side

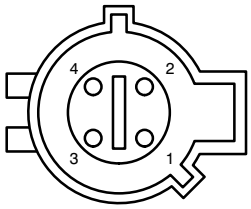

F04075

Pin	Circuit	Circuit Function
1	945 (YE/BK)	Mirror motor, feed
2	541 (DB/YE)	Up/Down mirror movement
3	–	not used
4	540 (RD)	Right/Left mirror movement

C521

14631

M220
Exterior rear view mirror, driver side

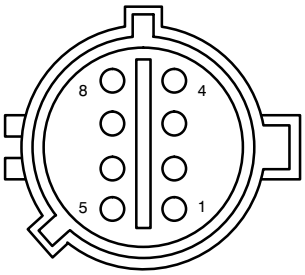

F08052

Pin	Circuit	Circuit Function
1	541 (DB)	Up/Down mirror movement
2	540 (RD)	Right/Left mirror movement
3	–	not used
4	–	not used
5	945 (YE/BK)	Mirror motor, feed
6	57 (BK)	Ground
7	55 (BK/PK)	Cargo lamp, output
8	–	not used

C523

14631

Y28
Speaker, left front

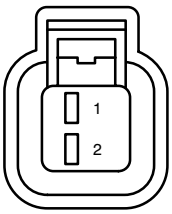

F02069

Pin	Circuit	Circuit Function
1	804 (OG/LG)	Speaker, left front +
2	813 (LB/WH)	Speaker, left front –

C524 (GY)

14631

M80
Power window motor, driver side front



F02073

Pin	Circuit	Circuit Function
1	992 (WH/BK)	Master window adjust switch, feed, Up
2	903 (RD)	Window motor, feed, Down

C525 (GY)

14631

M225
Door lock actuator, driver side

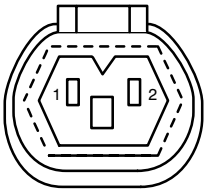

F02227

Pin	Circuit	Circuit Function
1	117 (PK/BK)	Door lock, output
2	163 (RD/OG)	Driver door unlock relay, switched power
	118 (PK/OG)	Door unlock, output

C526a

14631

N239
Door ajar switch, driver side front

F01065

Pin	Circuit	Circuit Function
1	765 (YE/BK)	Door ajar switch, left front