Power quarter window switch – Expedition

Schematic

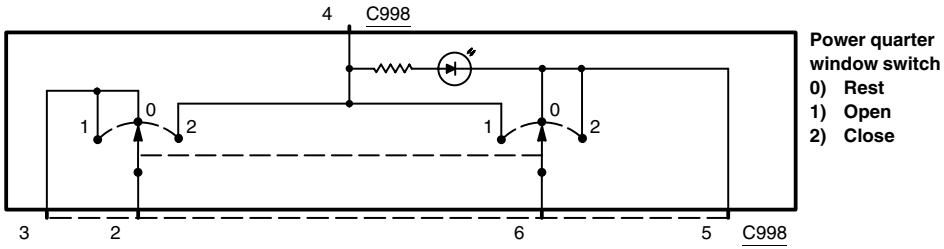

Terminals

C998

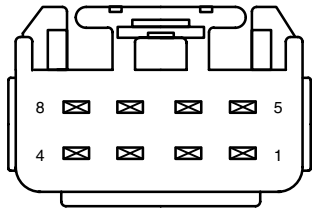

F08207

Component testing procedure

Circuit to test	Connect self–powered test light or ohm-meter to terminals	Move switch to these positions	A good switch will indicate
Power quarter window switch	2 and 3	Open	Closed circuit
		Rest	
		Close	Open circuit
	2 and 4	Open	Open circuit
		Rest	
		Close	Closed circuit
	6 and 5	Open	Open circuit
		Rest	Closed circuit
		Close	
	6 and 4	Open	Closed circuit
		Rest	Open circuit
		Close	