C2104 (GY)

14401

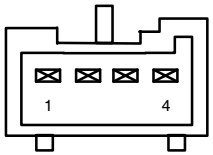

F04183

19A041

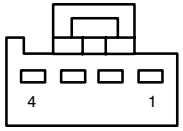

F04153

(1) 811 (DG/OG)
(2) 805 (WH/LG)
(3) 57 (BK)
(4) 761 (GY/RD)

C3020

19A170

Subwoofer

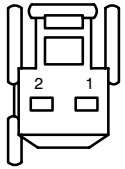

F02047

Pin	Circuit	Circuit function
1	176 (PK/LG)	Subwoofer +
2	179 (OG/RD)	Subwoofer –

C3014 (GY)

14401

Driver safety belt retractor pretensioner

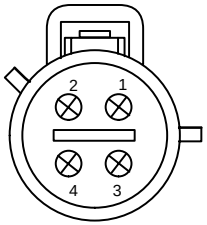

F04269

Pin	Circuit	Circuit function
1	1080 (LG/BK)	Driver safety belt retractor pretensioner, return
2	57 (BK)	Ground
3	1079 (LG/RD)	Driver safety belt retractor pretensioner, feed
4	85 (BN/LB)	Safety belt buckle switch (10B924), input

C3041a (GY)

19B113

Subwoofer amplifier (18C804)

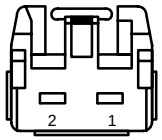

F02251

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	828 (VT/LB)	Voltage supplied at all times (overload protected)