C2028b (GY)

14N104

A205
Electronic Automatic Temperature Control (EATC) module (19980)

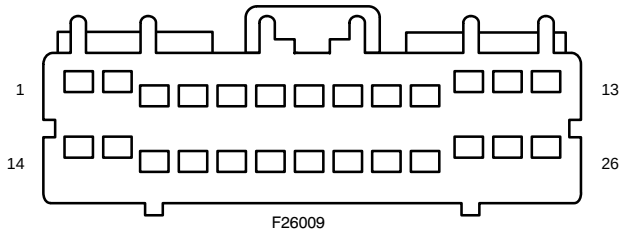

Pin	Circuit	Circuit function
1	HC02 (RD/GN)	Front blower motor speed controller (19E624), from EATC
2	–	not used
3	–	not used
4	HA01 (GY)	Voltage in Run (overload protected)
5	HA22 (BU/RD)	Air temperature door variable resistor –
6	HA21 (OG)	Air temperature door variable resistor, wiper
7	HA20 (BU/BK)	Air temperature door variable resistor, +
8	–	not used
9	–	not used
10	–	not used
11	HA23 (RD/WH)	Blend door actuator, front
12	HA24 (RD/BK)	Blend door actuator, front
13	IH91 (PK/BK)	Illumination, Ground
14	HC23 (BK/YE)	Front blower motor relay, control
15	–	not used
16	HA28 (VT)	Voltage supplied at all times (overload protected)
17	–	not used
18	HAE2 (BK)	Ground
19	–	not used
20	–	not used
21	–	not used
22	HA09 (WH)	Air inlet door actuator
23	HA06 (YE/BK)	Air inlet door actuator
24	HA17 (GN)	Mode actuator, from EATC
25	HA18 (GN/YE)	Mode actuator, from EATC
26	IH01 (PK)	Illumination, feed

C2032a (WH)

14N104

A204
Smart Entry Control (SEC)/Timer module

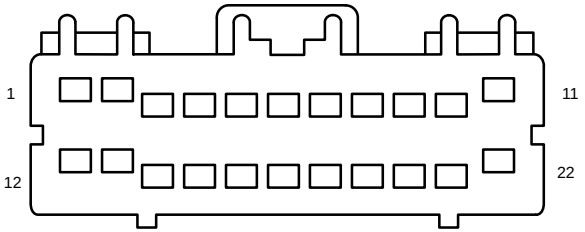

Pin	Circuit	Circuit function
1	ST70 (GN/RD)	Voltage supplied at all times (overload protected)
2	–	not used
3	SC24 (VT)	Door unlock, switch sense
4	PH19 (GN/OG)	Door unlock, switch sense
5	PP42 (GN)	Safety belt indicator, control
6	SC15 (GN/YE)	Door unlock, switch sense
7	SC13 (LG/RD)	Voltage in Run or Accessory (overload protected)
8	ER10 (BU/OG)	Key warning switch (11A127), input
9	LI87 (RD)	Door ajar switch, left front
10	IP02 (BU)	Illumination dimmer, –
11	JC11 (PK/BK)	Illumination, Ground
12	SCE3 (BK)	Ground
13	–	not used
14	SC14 (RD/BU)	Door unlock, switch sense
15	PH10 (GN/WH)	Door lock, switch sense
16	SC16 (RD/YE)	Door unlock, switch sense
17	PS95 (GY)	Anti–theft ON indicator, control
18	–	not used
19	ER05 (LG)	Voltage supplied in Start and Run (overload protected)
20	IP01 (BU/RD)	Illumination dimmer, +
21	LI94 (RD/GN)	Sliding door ajar switch, right
22	MA41 (BN/WH)	Door ajar indicator, control