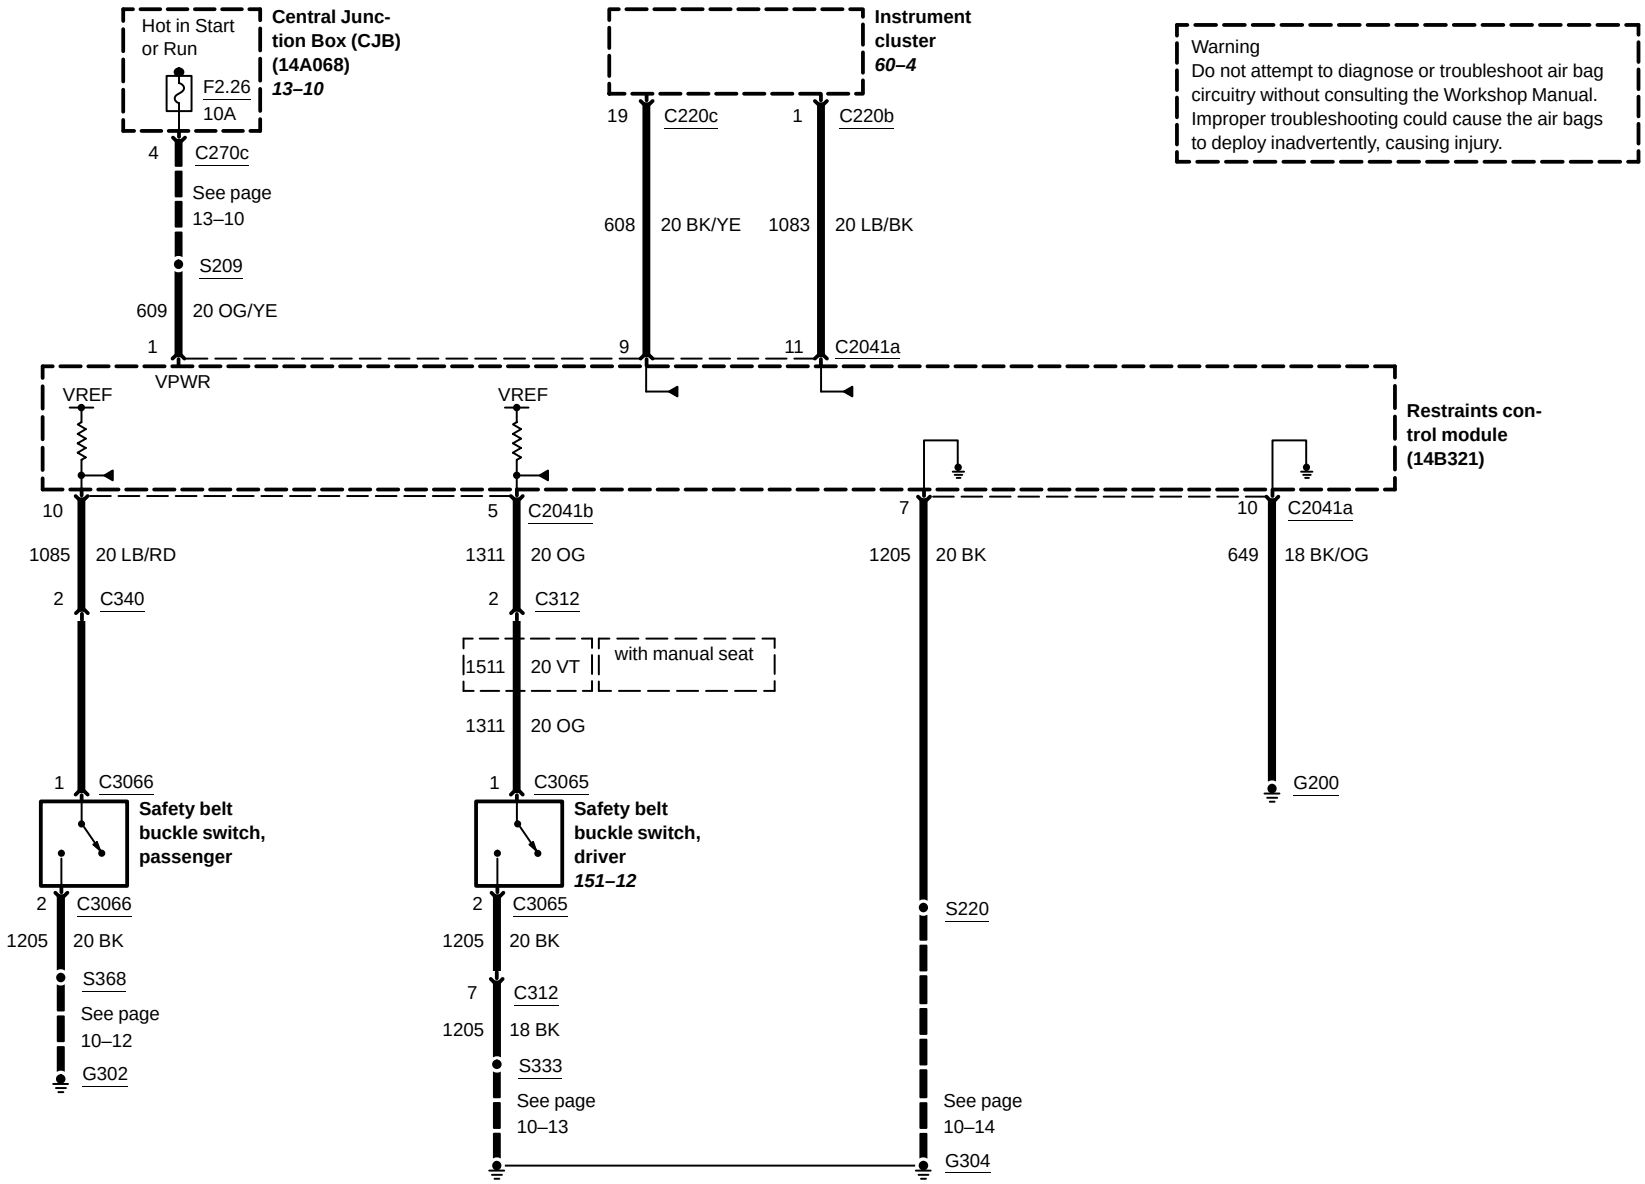
Hot in Start or Run
F2.26
10A
Central Junction Box (CJB) (14A068)
13–10
4
C270c
See page 13–10
S209
609
20 OG/YE
1
VPWR
Instrument cluster
60–4
19
C220c
1
C220b
608
20 BK/YE
1083
20 LB/BK
9
11
C2041a
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
VREF
VREF
Restraints control module (14B321)
10
1085
20 LB/RD
2
C340
5
C2041b
1311
20 OG
2
C312
1511
20 VT
with manual seat
1311
20 OG
7
1205
20 BK
10
C2041a
649
18 BK/OG
G200
1
C3066
Safety belt buckle switch, passenger
1
C3065
Safety belt buckle switch, driver
151–12
2
C3066
1205
20 BK
S368
See page 10–12
G302
2
C3065
1205
20 BK
7
C312
1205
18 BK
S333
See page 10–13
S220
See page 10–14
G304