C4127

14406

Natural Gas Vehicle (NGV) fuel tank pressure sensor

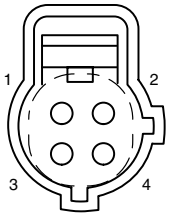

F04253

Pin	Circuit	Circuit function
1	1160 (BN/WH)	Reference voltage
2	1163 (BN)	signal, return
3	–	not used
4	1161 (DG/OG)	Sensor signal

C4128

14406

Natural Gas Vehicle (NGV) fuel tank temperature sensor

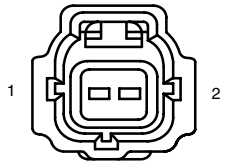

F02111

Pin	Circuit	Circuit function
1	1162 (LG/RD)	Fuel tank temperature sensor, signal
2	1163 (BN)	Signal return

C4129

A2–766

Tank valve 1

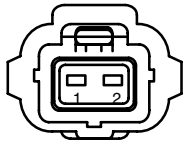

F02015

Pin	Circuit	Circuit function
1	G080 (RD/LB)	Fuel pump, Power
2	G003 (YE)	Tank valve 1, control

C4130

A2–766

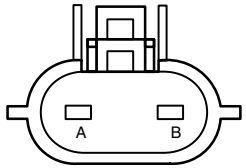

F02339

Pin	Circuit	Circuit function
A	G008 (BK)	Fuel tank pressure sensor, and, Fuel tank temperature sensor – Reference voltage
B	G026 (OG)	Fuel tank temperature sensor, signal

C4131

14405

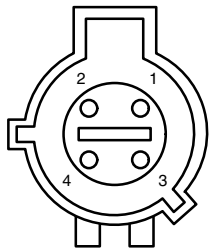

F04082

(1) 787 (PK/BK)
(2) 29 (YE/WH)
(3) 396 (BK/OG)
(4) 57 (BK)

A2–520

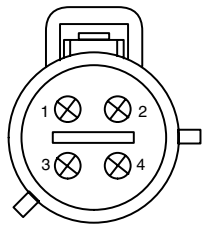

F04263

(1) G080 (PK)
(2) G802–2 (WH)
(3) G802–3 (WH)
(4) G802–4 (WH)