C3163

19K315

Heated seat module, right rear

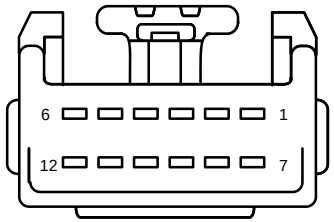

F12075

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	1061 (BN/LB)	Temperature, return
4	1060 (BK/LB)	Temperature, signal
5	1040 (RD/BK)	Voltage in Run (overload protected)
6	1064 (YE/LB)	heater, feed
7	1065 (WH/LB)	heater, return
8	581 (RD)	Climate controlled seat module – High
9	579 (BK/OG)	indicator – Low
10	580 (BN)	indicator – High
11	1256 (WH/YE)	Climate controlled seat module – Low
12	1445 (RD/LG)	Voltage supplied at all times (overload protected)

C3164

18A919

Power point, left rear

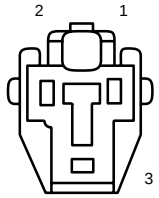

F03163

Pin	Circuit	Circuit function
1	1507 (WH/RD)	Voltage supplied at all times (overload protected)
2	–	not used
3	57 (BK)	Ground

C3165

18A919

Power point, right rear

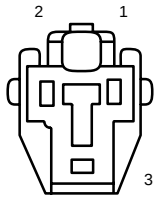

F03163

Pin	Circuit	Circuit function
1	1521 (LG)	Voltage supplied at all times (overload protected)
2	–	not used
3	57 (BK)	Ground

C3167

19K315

Seat cushion heater, left rear

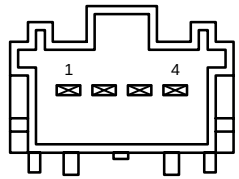

F04139

Pin	Circuit	Circuit function
1	1064 (YE/LB)	heater, feed
2	1060 (BK/LB)	Temperature, signal
3	1061 (BN/LB)	Temperature, return
4	1064 (YE/LB)	heater, return

C3168

19K315

Seat back heater, left rear

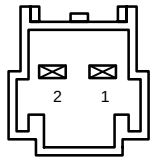

F02077

Pin	Circuit	Circuit function
1	1065 (WH/LB)	heater, return
2	1064 (YE/LB)	heater, feed