C605 (GN)

14A005

Door lock switch, passenger side (14028)

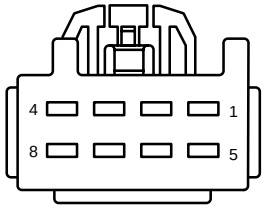

F08193

Pin	Circuit	Circuit function
1	31-LH42 (BK/BU)	Ground
2	–	not used
3	8-AA21 (WH/GN)	Sensor signal
4	31-AA37 (BK/WH)	Ground
5	7-LH42 (YE/RD)	Voltage DC supplied at all times (sensor)
6	–	not used
7	8-AA20 (WH/BU)	Sensor signal
8	–	not used

C608

14A488

Power window motor, passenger side front (23394)

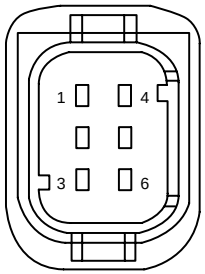

F06261

Pin	Circuit	Circuit function
1	31-AJ82 (BK/WH)	Ground
2	10-AJ82 (GY/WH)	Signal 2 (Y–direction, reverse, downward)
3	32-AJ27 (WH/VT)	Switched between: Battery voltage, Ground or Open
4	7-AJ82 (YE/VT)	Voltage DC supplied at all times (sensor)
5	8-AJ82 (WH/VT)	Sensor signal
6	33-AJ27 (YE/VT)	Switched between: Battery voltage, Ground or Open

C610

14A488

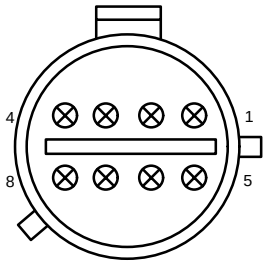

F08050

(1) –
(2) –
(3) 32-AJ27 (WH/VT)
(4) 7-AJ82 (YE/VT)
(5) 8-AJ82 (WH/VT)
(6) 33-AJ27 (YE/VT)
(7) 31-AJ82 (BK/WH)
(8) 10-AJ82 (GY/WH)

14A005

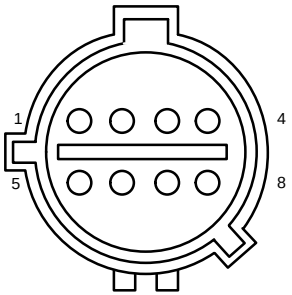

F08052