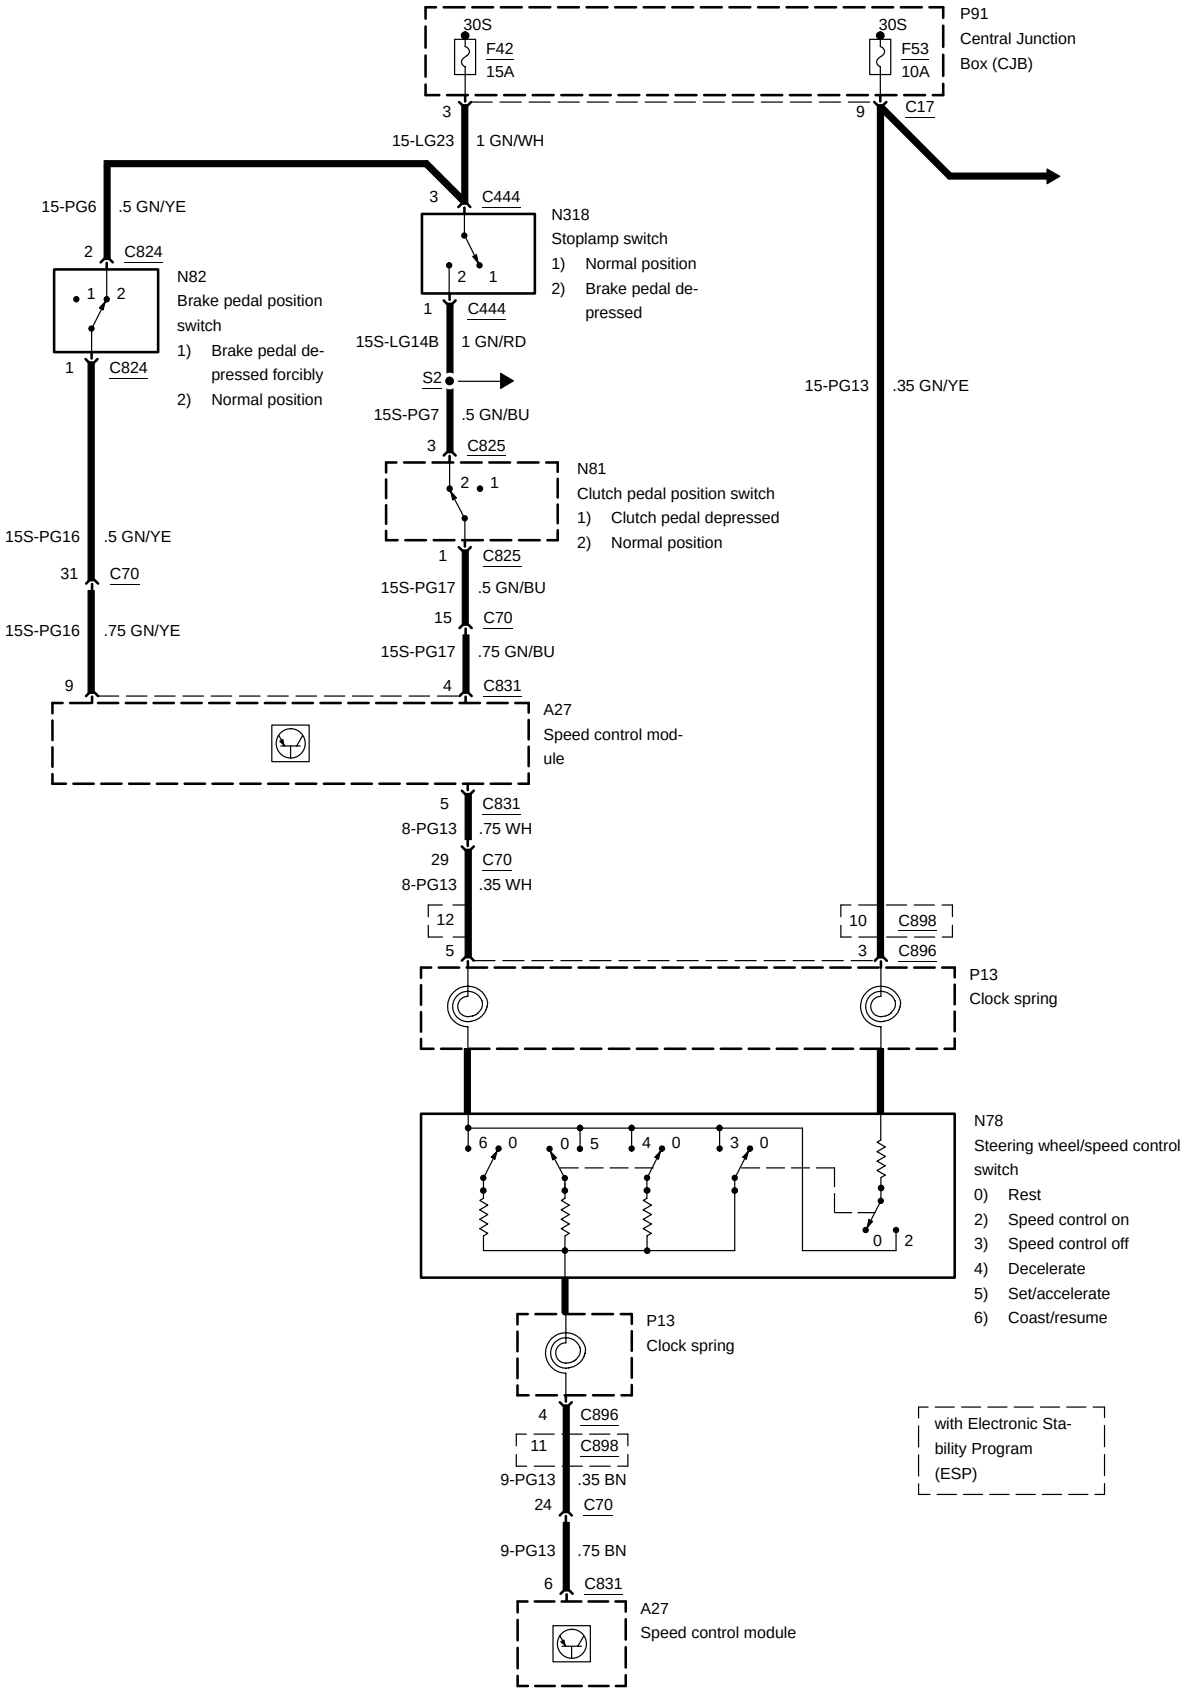
30S
F42
15A
30S
F53
10A
P91
Central Junction
Box (CJB)
3
9
C17
15-LG23
1 GN/WH
15-PG6
.5 GN/YE
3
C444
N318
Stoplamp switch
1) Normal position
2) Brake pedal de-
pressed
2
C824
N82
Brake pedal position
switch
1) Brake pedal de-
pressed forcibly
2) Normal position
1
C824
1
C444
15S-LG14B
1 GN/RD
S2
15-PG13
.35 GN/YE
15S-PG7
.5 GN/BU
3
C825
N81
Clutch pedal position switch
1) Clutch pedal depressed
2) Normal position
15S-PG16
.5 GN/YE
1
C825
31
C70
15S-PG17
.5 GN/BU
15S-PG16
.75 GN/YE
15
C70
15S-PG17
.75 GN/BU
9
4
C831
A27
Speed control mod-
ule
5
C831
8-PG13
.75 WH
29
C70
8-PG13
.35 WH
12
5
10
C898
3
C896
P13
Clock spring
N78
Steering wheel/speed control
switch
0) Rest
2) Speed control on
3) Speed control off
4) Decelerate
5) Set/accelerate
6) Coast/resume
P13
Clock spring
4
C896
11
C898
9-PG13
.35 BN
24
C70
9-PG13
.75 BN
6
C831
A27
Speed control module
with Electronic Sta-
bility Program
(ESP)