C368

14C693

Driver seat backrest motor

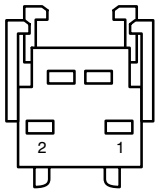

F04141

Pin	Circuit	Circuit function
1	32-AH36 (WH/RD)	Driver seat backrest motor +/-
2	33-AH36 (YE/RD)	Driver seat backrest motor +/-

C372

14B719

Driver memory seat horizontal sensor

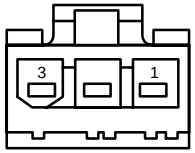

F03111

Pin	Circuit	Circuit function
1	7-AH26 (YE/RD)	Reference voltage
2	8-AH26 (WH/RD)	Driver memory seat horizontal sensor, signal
3	9-AH26 (BN/RD)	Signal return

C373

14B719

Driver memory seat rear height sensor

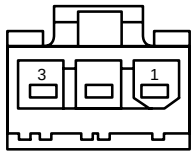

F03111

Pin	Circuit	Circuit function
1	7-AH25 (YE/GN)	Reference voltage
2	8-AH25 (WH/GN)	Driver memory seat rear height sensor, signal
3	9-AH25 (BN/GN)	Signal return

C376

14C693

Driver memory backrest sensor

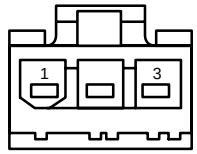

F03111

Pin	Circuit	Circuit function
1	7-AH30 (YE/BU)	Reference voltage
2	8-AH30 (WH/BU)	Driver memory backrest sensor, signal
3	9-AH30 (BN/BU)	Signal return

C382

14B719

Driver seat front height motor

F02071

Pin	Circuit	Circuit function
1	32-AH38 (WH/BK)	Driver seat front height motor +/-
2	33-AH38 (YE/BK)	Driver seat front height motor +/-

C383

14B719

Driver memory seat front height sensor

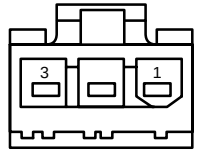

F03111

Pin	Circuit	Circuit function
1	9-AH24 (BN/YE)	Signal return
2	8-AH24 (WH/BK)	Driver memory seat front height sensor, signal
3	7-AH24 (YE/BK)	Reference voltage