C1185

12B637/9D930

Y112
Fuel injector 5
(9F593)

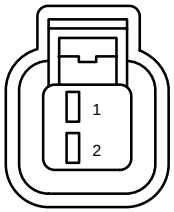

F02069

Pin	Circuit	Circuit function
1	559 (TN/BK)	Fuel injector 5, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1186

12B637/9D930

Y113
Fuel injector 6
(9F593)

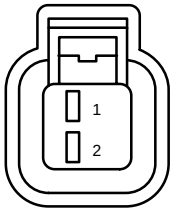

F02069

Pin	Circuit	Circuit function
1	560 (LG/OG)	Fuel injector 6, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1199

12A581

K356
Trailer tow relay,
parking lamp

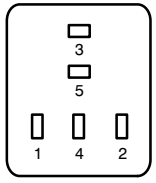

F05139

Pin	Circuit	Circuit function
1	14 (BN)	Power, Exterior lamps
2	57 (BK)	Ground
3	962 (BN/WH)	Trailer tow relay, switched output
4	–	not used
5	37 (YE)	Voltage supplied at all times (overload protected)

C1200

12A581

K355
Trailer tow relay,
battery charge

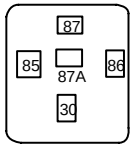

F05105

Pin	Circuit	Circuit function
30	37 (YE)	Voltage supplied at all times (overload protected)
85	57 (BK)	Ground
86	296 (WH/VT)	Fused accessory relay, switched power, output
87	49 (OG)	Voltage in Run (overload protected)
87A	–	not used

C1204

12B637

Y240
Fuel injector 9
(9F593)

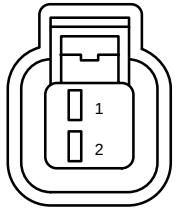

F02069

Pin	Circuit	Circuit function
1	1100	Fuel injector 9 (9F593), control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1205

12B637

Y241
Fuel injector 10
(9F593)

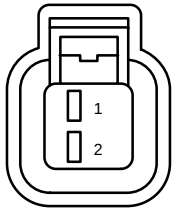

F02069

Pin	Circuit	Circuit function
1	1101	Fuel injector 10 (9F593), control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)