## C451

### 14405

E105
Reversing lamp, left

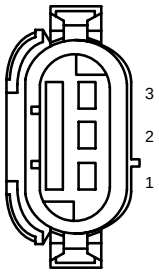


F03099

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 140 (BK/PK) | Voltage supplied in reverse |
| 2 | - | not used |
| 3 | 8 (OG/YE) | Voltage supplied in Start and Run (overload protected) |

## C454

### 14A583

E34
License plate lamp, left

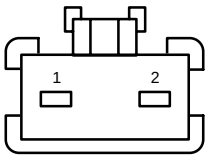


F02345

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 14 (BN) | Power, Exterior lamps |
| 2 | 57 (BK) | Ground |

## C456

### 14A583

N255
Liftgate door lock switch

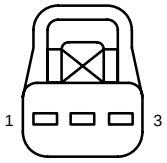


F03207

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 1296 (OG/BK) | Passenger front door lock switch, Door lock, input |
| 2 | 57 (BK) | Ground |
| 3 | 1297 (YE/RD) | Passenger front door lock switch, Door lock, input |

## C457

### 14A583

M245
Liftgate lock actuator

F02116

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 117 (PK/BK) | Door lock, output |
| 2 | 118 (PK/OG) | Door unlock, output |

## C461

### 14405

E109
Reversing lamp, right

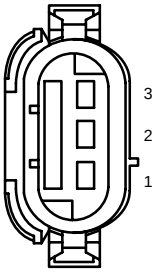


F03099

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 140 (BK/PK) | Voltage supplied in reverse |
| 2 | - | not used |
| 3 | 8 (OG/YE) | Voltage supplied in Start and Run (overload protected) |

## C462

### 14A583

E35
License plate lamp, right

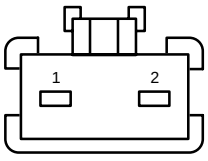


F02345

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 14 (BN) | Power, Exterior lamps |
| 2 | 57 (BK) | Ground |