C505

14A005

N204
Door lock switch,
driver side (14028)

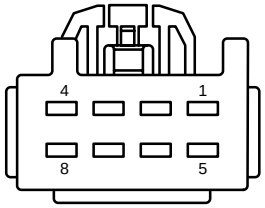

F08193

Pin	Circuit	Circuit function
1	57 (BK)	Illumination Ground
2	57 (BK)	switch common – without remote keyless entry
	–	not used – with remote keyless entry
3	120 (PK/LG)	Unlock Switch Circuit – without remote keyless entry
	1210 (BK/WH)	Unlock Switch Circuit – with remote keyless entry
4	116 (RD/BK)	Voltage supplied at all times (overload protected) – without remote keyless entry
	57 (BK)	Ground – with remote keyless entry
5	194 (PK)	Switch illumination
6	–	not used
7	119 (PK/YE)	Lock Switch Circuit – without remote keyless entry
	1211 (WH/RD)	Lock Switch Circuit – with remote keyless entry
8	57 (BK)	switch common – without remote keyless entry
	–	not used – with remote keyless entry

C506

14A005

E177
Door entry lamp, left
front (13776)

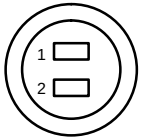

F02086

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	53 (BK/LB)	Interior lamp relay, switched power, output

C510 (GY)

14A631

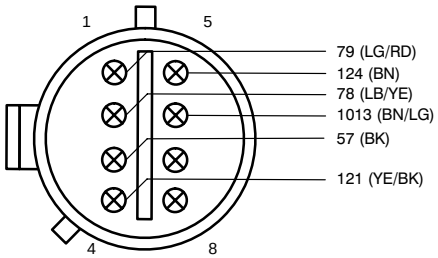

F08049

14A005

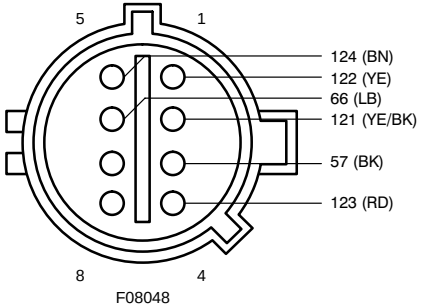

F08048