C443b

14K024

A11
Radio



F07011

Pin	Circuit	Circuit Function
1	29-MD15 (OG/BK)	Voltage supplied at all times (overload protected)
2	91-MD15A (BK/GN)	Ground
3	75-MD15 (YE/GN)	Voltage: Ignition switch in Accessory or Run
4	64S-LK34 (BU/BK)	Variable D.C. voltage (not overload protected), switched
5	31S-GL15 (BK/OG)	Ground, switched
6	91-MD15 (BK/GN)	Ground
7	–	not used

C443c

14K024

A11
Radio

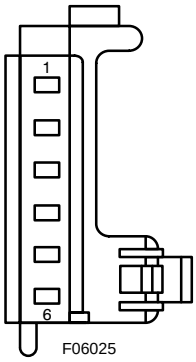

F06025

Pin	Circuit	Circuit Function
1	8-MD24 (WH/GN)	Sensor signal
2	–	not used
3	–	not used
4	91-MD15B (BN/GN)	Ground
5	–	not used
6	–	not used

C444

13A612

N318
Stoplamp switch

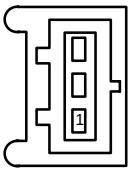

F03030

Pin	Circuit	Circuit Function
1	15-LG23 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
	15-PG6 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
2	–	not used
3	15S-LG23 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched
	15S-PG7 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
	15S-LG23 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched
	15S-PG17 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched