C997a (BK)

13A409

Liftgate drive motor assembly, left

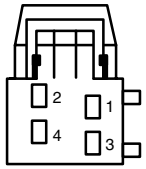

F04140

Pin	Circuit	Circuit function
1	1601 (WH/PK)	liftgate drive motor, Close, feed
2	1599 (TN/LB)	liftgate drive motor, Open, feed
3	–	not used
4	–	not used

C997b (BK)

13A409

Liftgate drive motor assembly, left

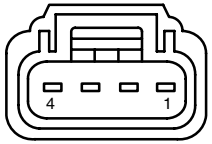

F04162

Pin	Circuit	Circuit function
1	1968 (YE)	Liftgate optical sensor, signal 1
2	1969 (WH/YE)	Liftgate optical sensor, signal 2
3	1970 (RD/LB)	Liftgate optical sensor, Power
4	1971 (LB/OG)	Liftgate optical sensor, Ground

C998 (GY)

14335

Power quarter window switch

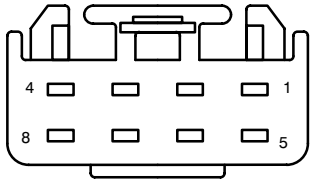

F08074

Pin	Circuit	Circuit function
1	–	not used
2	1942 (RD/YE)	Power quarter window switch, Close, output
3	57 (BK)	Ground
4	194 (PK)	Accessory delay relay, output
5	57 (BK)	Ground
6	1941 (YE/LB)	Power quarter window switch, Open, output
7	–	not used
8	–	not used