C2008 (BK)

14401

Brake shift interlock

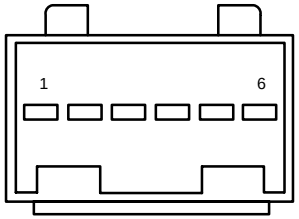

F06249

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	810 (RD/LG)	Brake pedal position switch (13480), input
3	1003 (GY/YE)	Voltage supplied in Start and Run (overload protected)
4	31 (WH/RD)	Ignition switch (11572) to Brake shift interlock
5	–	not used
6	1205 (BK)	Ground

C2021

14A067

Rear window defrost relay

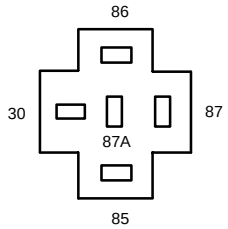

F05016

Pin	Circuit	Circuit function
87	186 (BN/LB)	Rear window defrost relay, switched power
87A	–	not used
85		Voltage supplied in Start and Run (overload protected)
86	1009 (OG/YE)	Rear window defrost relay, control
30	185 (BK)	Voltage supplied at all times (overload protected)

C2015 (BK)

14A488

Parking brake switch (15A851)

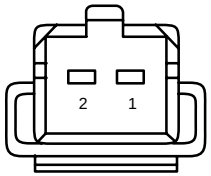

F02217

Pin	Circuit	Circuit function
1	162 (LG/RD)	Parking brake switch (15A851)
2	1205 (BK)	Ground