C300

19B113

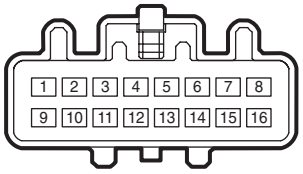

97BG-14A459-ZTB (M)

18B971

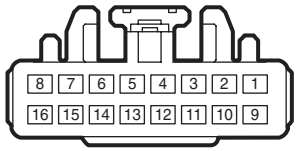

97BG-14489-ZTB (F)

(1) 1205 (BK)
(2) - not used -
(3) 1203 (BK/LB)
(4) 1068 (LG/BK)
(5) 832 (LB/PK)
(6) 833 (TN)
(7) - not used -
(8) 1011 (TN/OG)
(9) 48 (Bare)
(10) 1559 (RD)
(11) 1560 (WH)
(12) 1561 (OG)
(13) 1562 (YE)
(14) - not used -
(15) - not used -
(16) 1001 (WH/YE)

C303a

14C719

Safety belt retractor pretensioner, passenger

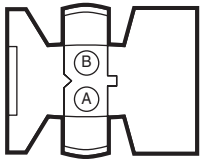

1W1T-14A464-BA (F)

Pin	Circuit	Circuit Function
A	1082 (YE/BK)	Seat belt- passenger pretensioner return
B	1081 (YE/RD)	Seat belt- passenger pretensioner feed

C310a

14401

Restraints Control Module (RCM)

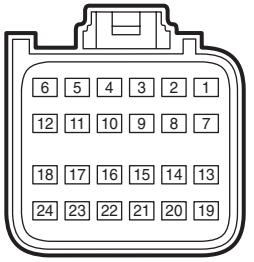

1F1T-14A464-KB (F)

Pin	Circuit	Circuit Function
1	614 (GY/OG)	Air bag driver feed monitor
2	615 (GY/WH)	Air bag driver return
3	607 (LB/OG)	Air bag passenger feed monitor
4	616 (PK/BK)	Air bag passenger return
5	1516 (YE/WH)	Driver airbag feed 2
6	1517 (RD/OG)	Driver airbag return 2
7	—	not used
8	—	not used
9	—	not used
10	—	not used
11	70 (LB/WH)	ISO 9141 link
12	1003 (GY/YE)	Fused ignition "run" to module, GEM-input
13	1518 (RD/WH)	Passenger airbag feed 2
14	1519 (LG/RD)	Passenger airbag return 2
15	—	not used
16	649 (BK/OG)	Air bag dedicated ground
17	1886 (GY)	VEMS airbag activation input from RCM
18	—	not used
19	608 (BK/YE)	Air bag diagnostic lamp driver
20	1003 (GY/YE)	Fused ignition "run" to module, GEM-input
21	1003 (GY/YE)	Fused ignition "run" to module, GEM-input
22	1390 (DB)	Instrument cluster module: air bag tone request signal
23	—	not used
24	—	not used