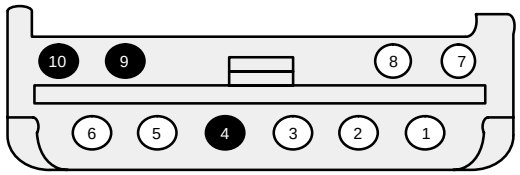

C456

SUBWOOFER AMPLIFIER

PIN	CIRCUIT	CIRCUIT FUNCTION
1	173 (DG/VT)	High Audio Mute
2	694 (BK/LG)	Ground
3	694 (BK/LG)	Ground
4	–	NOT USED
5	797 (LG/VT)	Power (Hot at All Times)
6	797 (LG/VT)	Power (Hot at All Times)
7	167 (BN/OG)	High Audio (+)
8	168 (RD/BK)	High Audio (–)
9	–	NOT USED
10	–	NOT USED

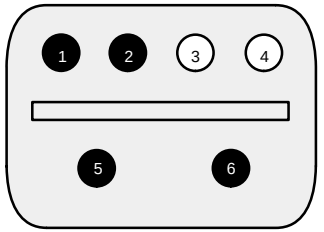

C473

SUBWOOFER AMPLIFIER

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	–	NOT USED
3	287 (BK/WH)	Speaker Voice Coil Return
4	822 (BK/LG)	Speaker Voice Coil Feed
5	–	NOT USED
6	–	NOT USED