C294b (BK)

14401

Function selector switch assembly

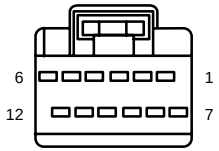

F12077

Pin	Circuit	Circuit function
1	1003 (GY/YE)	Voltage supplied at all times (overload protected)
2	1050 (LG/VT)	Voltage supplied in Start and Run (overload protected)
3	773 (DG/OG)	Air temperature door variable resistor, wiper
4	14 (BN)	Power, Exterior lamps
5	59 (DG/VT)	Voltage supplied in Start and Run (overload protected)
6	1205 (BK)	Ground
7	349 (DB)	Heater blower motor (19805), to, Heater blower switch
8	269 (LB/OG)	Heater blower motor (19805), to, Heater blower switch
9	348 (VT)	A/C demand signal
10	235 (RD/BK)	Instrument illumination, input
11	1203 (BK/LB)	Ground
12	688 (GY/LB)	Rear window defrost switch (18578), input

C294c (GY)

14401

Function selector switch assembly

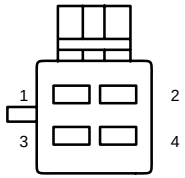

F04193

Pin	Circuit	Circuit function
1	260 (RD/OG)	Blower motor relay, control
2	1205 (BK)	Ground
3	754 (LG/WH)	Blower switch speed control, to resistor
4	752 (YE/RD)	Blower switch speed control, to resistor

C310a (BK)

14401

Restraints control module (14B321)

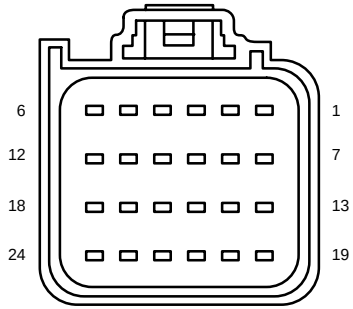

F24023

Pin	Circuit	Circuit function
1	614 (GY/OG)	Driver air bag, stage 1 +
2	615 (GY/WH)	Driver air bag, stage 1 –
3	607 (LB/OG)	Passenger air bag, stage 1 +
4	616 (PK/BK)	Passenger air bag, stage 1 –
5	1516 (YE/WH)	Driver air bag, stage II +
6	1517 (RD/OG)	Driver air bag, stage II –
7	–	not used
8	–	not used
9	–	not used
10	–	not used
11	70 (LB/WH)	Data bus ISO 9141 (K–line)
12	1003 (GY/YE)	Voltage supplied in Start and Run (overload protected)
13	1518 (RD/WH)	Passenger air bag, stage II +
14	1519 (LG/RD)	Passenger air bag, stage II –
15	–	not used
16	649 (BK/OG)	logic ground
17	–	not used
18	–	not used
19	608 (BK/YE)	Air bag indicator, control
20	1003 (GY/YE)	Voltage supplied in Start and Run (overload protected)
21	–	not used
22	1390 (DB)	tone driver
23	–	not used
24	–	not used