C504b

14A488

N447
Master window adjust switch (14529)

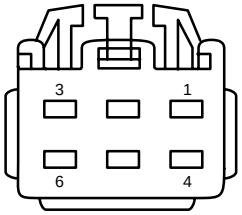

F06213

Pin	Circuit	Circuit function
1	–	not used
2	320 (RD/BK)	Window switch, feed, right rear, Down
3	319 (YE/BK)	Window switch, feed, right rear, Up
4	170 (RD/LB)	Window lockout, switched power, output
5	317 (GY/OG)	Window switch, feed, left rear, Down
6	316 (YE/LB)	Window switch, feed, left rear, Up

C505 (GN)

14A488

N204
Door lock switch, driver side (14028)

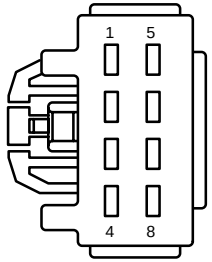

F08165

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	–	not used
3	120 (PK/LG)	Door unlock relay, control
4	1205 (BK)	Ground
5	14 (BN)	Power, Exterior lamps
	235 (RD/BK)	Door lock switch, driver side (14028), Illumination
6	–	not used
7	119 (PK/YE)	Door lock relay, control
8	–	not used

C509 (GY)

14A584

N261
Anti–theft inhibit switch

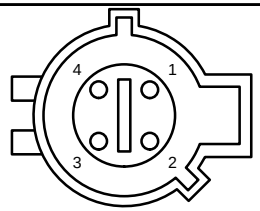

F04075

Pin	Circuit	Circuit function
1	24 (DB/OG)	not used
2	25 (DG/VT)	Anti–theft, switch, disarm
3	–	not used
4	1205 (BK)	Ground