C117

12B637

P72
Coil On Plug (COP) 7
(12029)

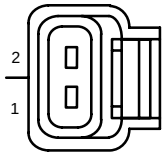

F02026

Pin	Circuit	Circuit function
1	1027 (PK/LB)	Coil On Plug (COP) 7 (12029), control
2	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)

C118

12B637

P73
Coil On Plug (COP) 8
(12029)

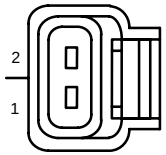

F02026

Pin	Circuit	Circuit function
1	1029 (WH/RD)	Coil On Plug (COP) 8 (12029), control
2	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)

C122

12A581

M87
Speed control servo
(9C735)

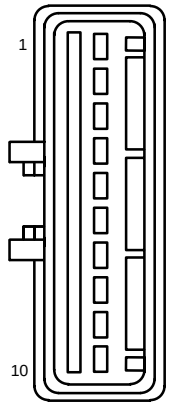

F10011

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
4	810 (RD/LG)	Brake pedal position switch (13480), input
5	151 (LB/BK)	Speed control switch, input
6	848 (DG/OG)	Speed control switch, Ground
7	295 (LB/BK)	Battery voltage, hot in Run only
8	–	not used
9	307 (BK/YE)	Brake pressure switch (2B264), input
10	57 (BK)	Ground